



INSTALLATION INSTRUCTIONS


TGH-2084-9

PLEASE NOTE:

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.

Doors Storage Cart

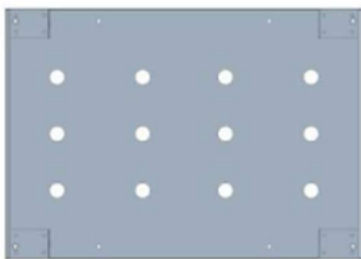

Bottom Platform




Tube (A)



Tube (B)

X4

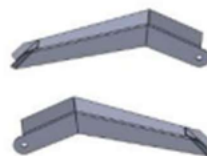

Both Sides
Connect Accessories



X2

Middle
Connect Accessories



INSTALLATION INSTRUCTIONS



Qty	Part Name	Size(mm)	Picture
6	Hex Bolts	M8*16	
10	Button Head Socket Cap Bolts Screws	M8*16	
16	Button Head Socket Cap Bolts Screws	M6*16	
14	Split Lock Washer	D8	
16	Split Lock Washer	D6	
14	Flat Washer	M8*16*1	
16	Flat Washer	M6*12*1	
2	Lockable Wheels		
2	Wheels		
4	EVA	308*209	
2	EVA	655*269	
2	EVA	655*203	

- a. Drive Socket Ratchet Wrench;**
- b. 4mm & 5mm Hex Bit Socket,**
- c.13mm Wrench;**

INSTALLATION INSTRUCTIONS


Installation time:

Step 1: Glue the EVA (655*269 & 655*203) into the bottom platform and the EVA (308*209) into the connect accessories.

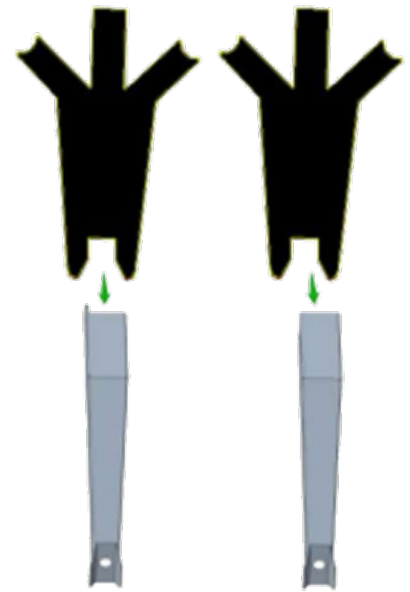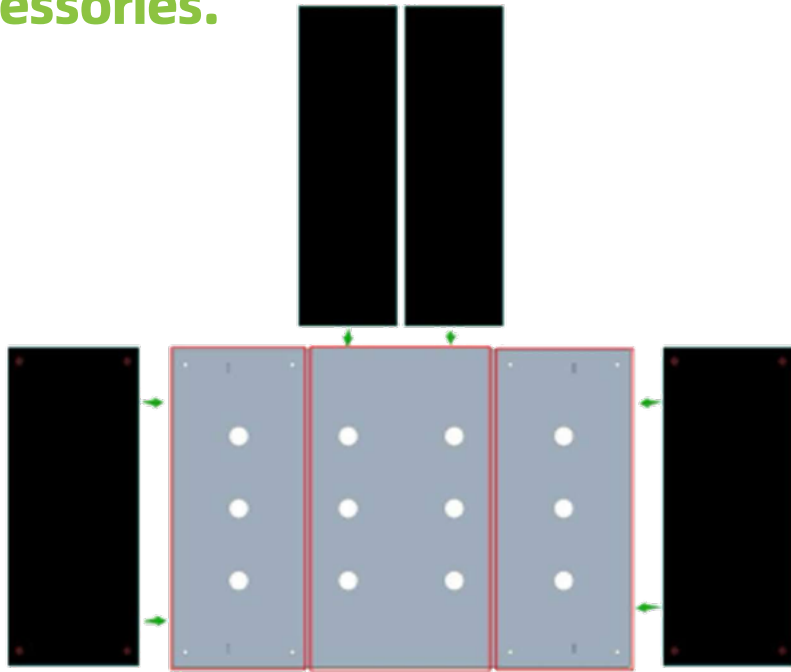

Step 2: First, to install the tube (B) into the both side of the bottom platform. Use the Button Head Socket Cap Bolts Screws (M8*16), Split Lock Washer (D8), Flat Washer (M8*16*1).

(4) M8*16 Button Head Socket Cap Bolts Screws
(4) D8 Split Lock Washer
(4) M8*16*1 Flat Washer


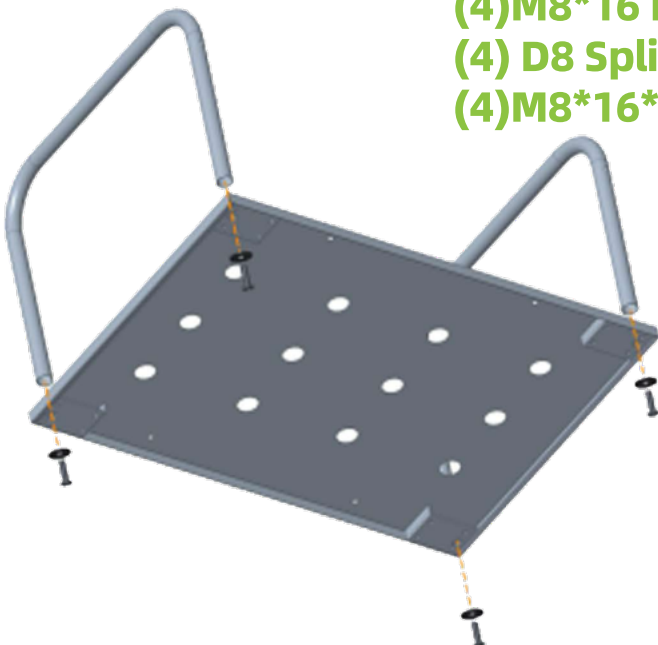




INSTALLATION INSTRUCTIONS

Step 3: Next, to install the wheels into the the bottom-platform. Use the Button Head Socket Cap Bolts Screws (M6*16), Split Lock Washer (D6), Flat Washer (M6*12*1). (You can install the lockable wheels wherever you prefer)

- (4) M6*16 Button Head Socket Cap Bolts Screws
- (4) D6 Split Lock Washer
- (4) M6*12*1 Flat Washer

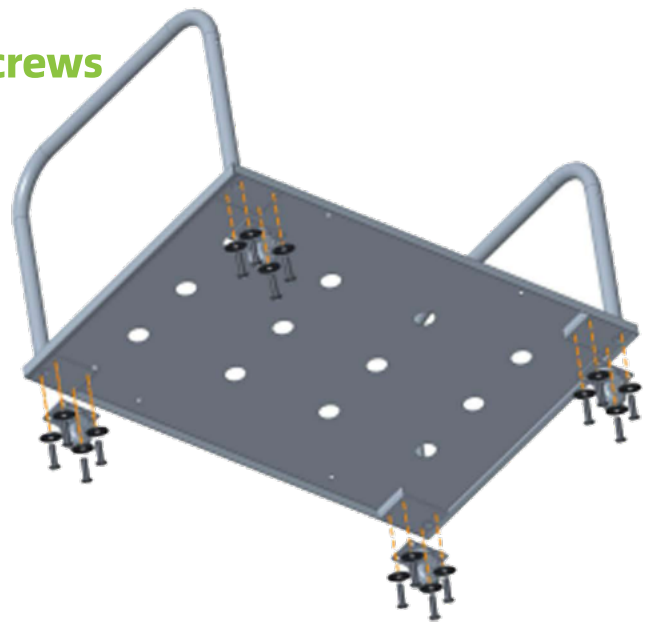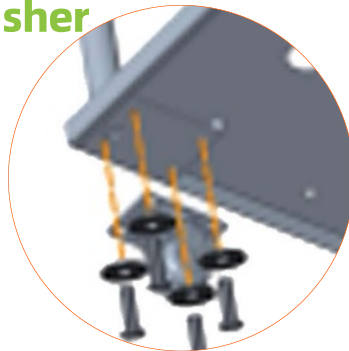


Step 4: To install the tube (B) into the middle of the bottom platform. Use the Button Head Socket Cap Bolts Screws (M8*16), Split Lock Washer (D8), Flat Washer (M8*16*1).



- (4) M8*16 Hex Bolts
- (4) D8 Split Lock Washer
- (4) M8*16*1 Flat Washer

INSTALLATION INSTRUCTIONS

Step 6: At last, to assemble the connect accessories & the tube (A). Use the Button Head Socket Cap Bolts Screws (M8*16) in both sides. Use the Hex Bolts (M8*16), Split Lock Washer (D8), Flat Washer (M8*16*1) in middle.

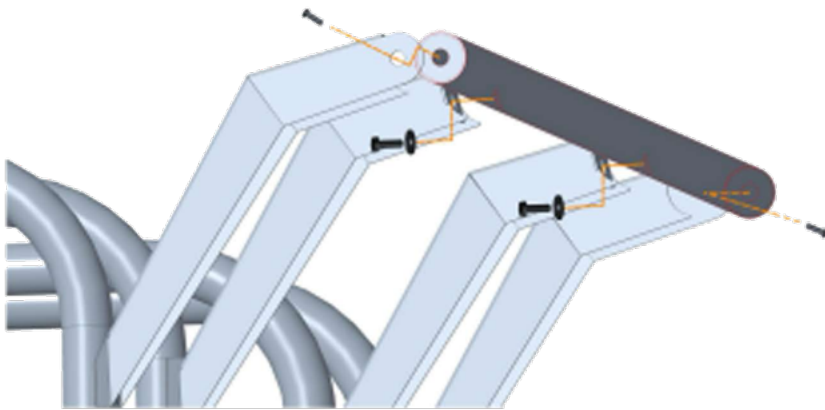

Both Sides

(2) M8*16 Button Head Socket Cap Bolts Screws

Middle


M8*16 Hex Bolts

INND8 Split Lock Washer

M8*16*1 Flat Washer

Use manual:

Step 7: Before using, please remove the car doors and fold in the side mirrors of the front doors. Also, roll down the windows for safety. When placing the doors, position the front door in the middle and the rear door on both-sides.

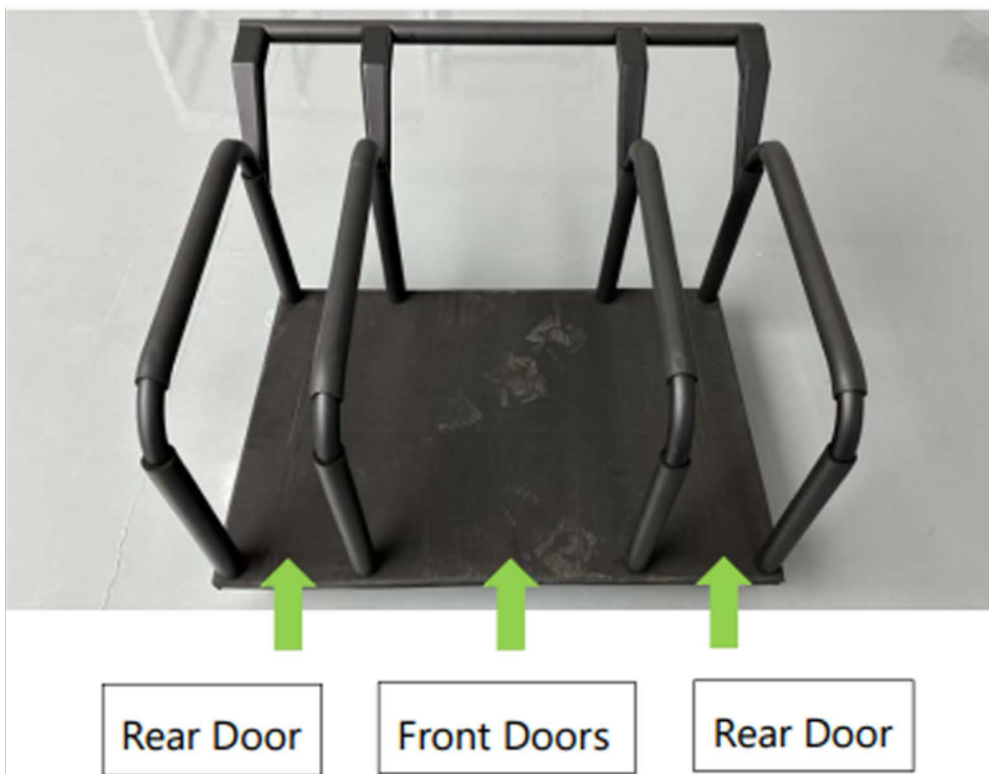



INSTALLATION INSTRUCTIONS

Step 8:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1. The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2. Please feel free to contact your distributor if you have any kind of question about your purchase.