

INSTALLATION INSTRUCTIONS

TGH.2601-9

INSTALLATION TIME

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.



Qty	Part Name	Size(mm)	Qty	Part Name	Size(mm)
1	Interior Cargo Back Assembly	—	4	Split Lock Washer	M10
4	Button Head Socket Cap Bolts Screws	M10*20	4	Flat Washer	M10
4	Flange Hex Lock Nuts	M10	—	—	—



× 4

M10*20



× 4

M10



× 4

M10



× 4


M10



C. Net

Tools required:

- a. 13mm Wrench;
- b. 6mm Hex Bit Socket;
- c. Drive Socket Ratchet Wrench;

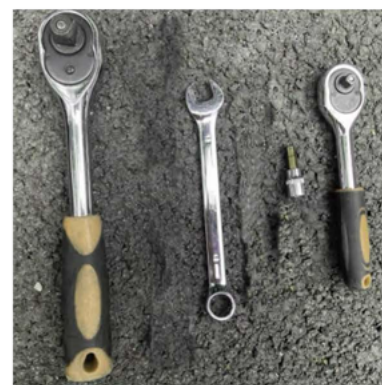

INSTALLATION INSTRUCTIONS

Installation time

About 1 hour, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

Step 1: Put down the rear seats, empty the rear row and prepare to install the luggage rack.



Step 2: Install the Left (A1) & Right (A2) Brackets into your vehicle with the factory bolts. As the picture shown.



INSTALLATION INSTRUCTIONS

Step 3: Assemble the Left (A1) & Right (A2) Brackets & the Cargo Rack (B) with the Button Head Socket Cap Bolts Screws (M10*20), Split Lock Washer (D10), Flat Washer (M10), Flange Hex Lock Nuts (M10). As the picture shown.



Step 4: The instructions for use of this Net (Part C)



Step 5:
The installation is complete. We hope you enjoy a wonderful off-road life with this quality product!

