

INSTALLATION INSTRUCTIONS

TGH.F108

PLEASE NOTE:

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.


CONTENTS



No.	Name	QTY	Pic.
A	Head Bolt M6×20	8	
B	Lock Nut M8	72	
C	Spring Washer D6	8	
D	Lock Washer D6×12	8	
E	Flat Head Hex Socket Screw M8×20	64	
F	Flat Head Hex Socket Screw M8×25	8	
G	Plastic Washer D8	64	
H	Lock Washer D8×12	64	


INSTALLATION INSTRUCTIONS

Installation Procedure

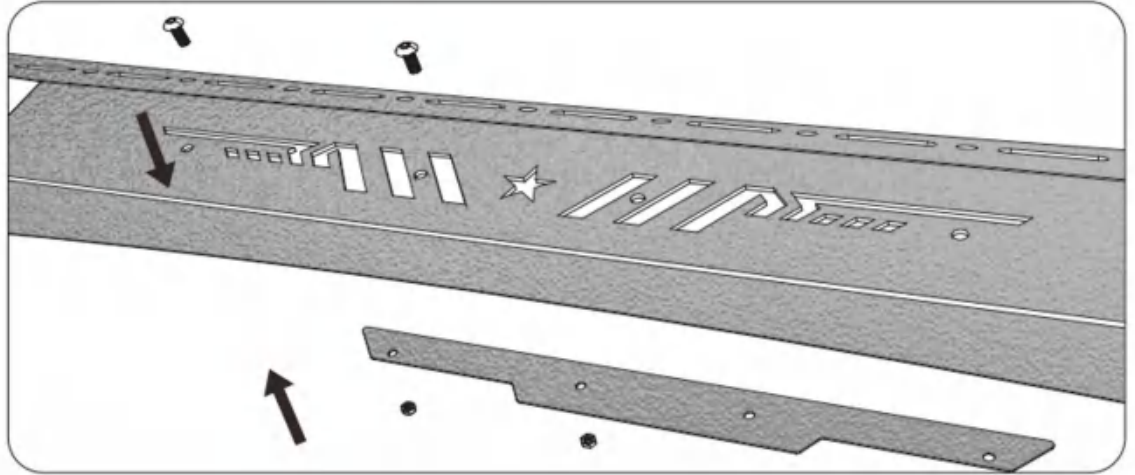


STEP.1 SECURE THE BACK PANEL WITH SCREWS.



STEP.2 SECURE THE SIDE BRACKET WITH SCREWS

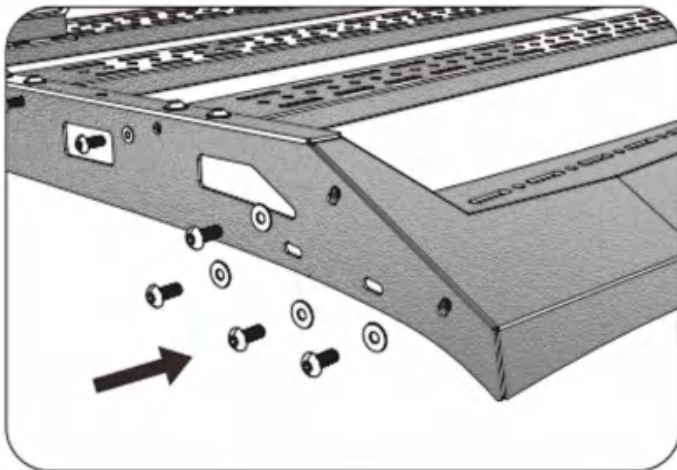

STEP.3 SECURE THE BRACKET NUT

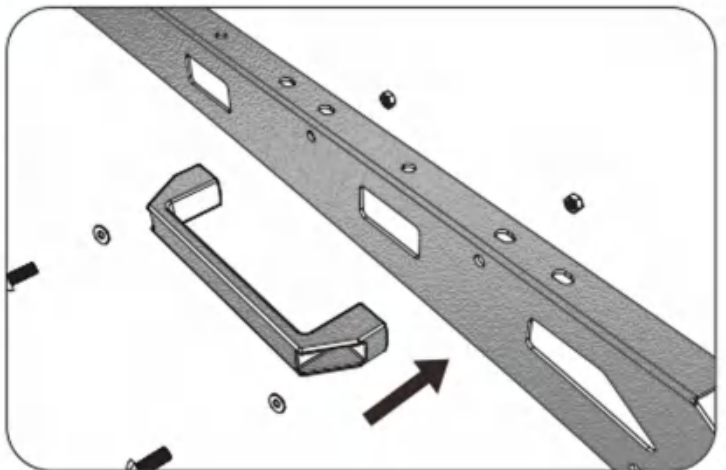


STEP.4 SECURE THE CROSSBAR BRACKET

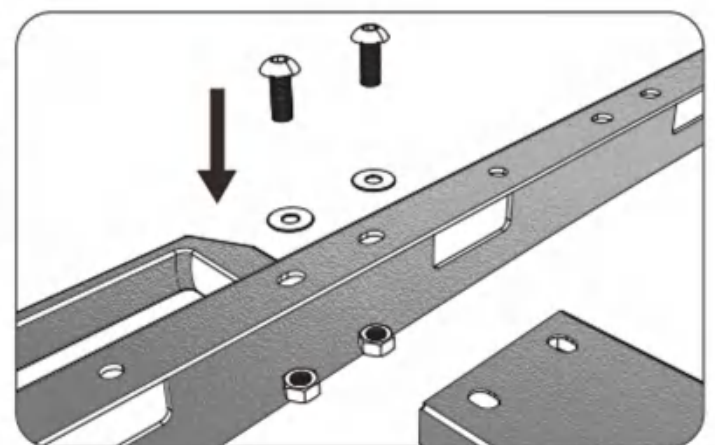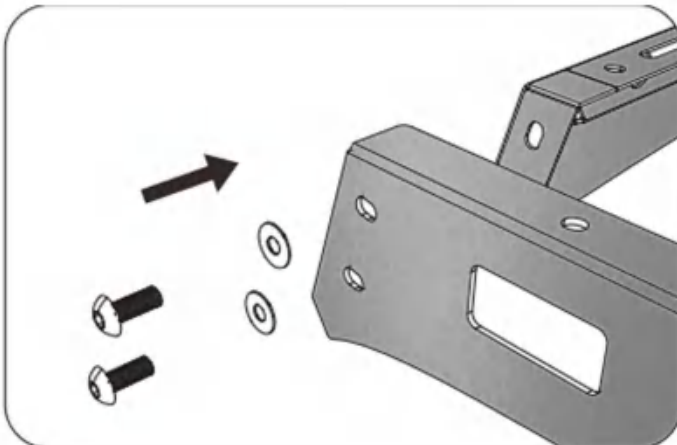


INSTALLATION INSTRUCTIONS

STEP.5 SECURE THE BRACKET NUT

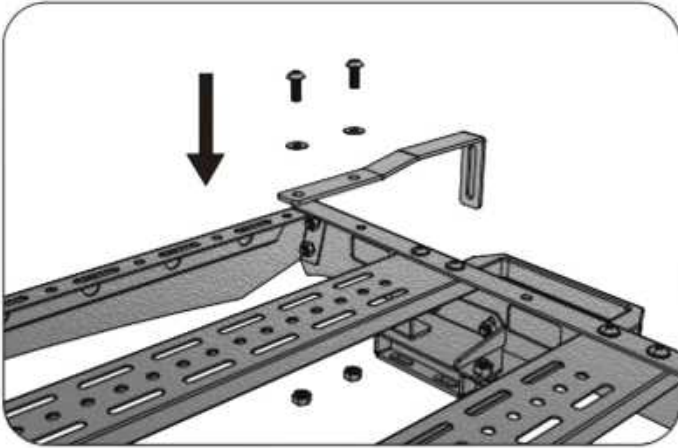


STEP.6

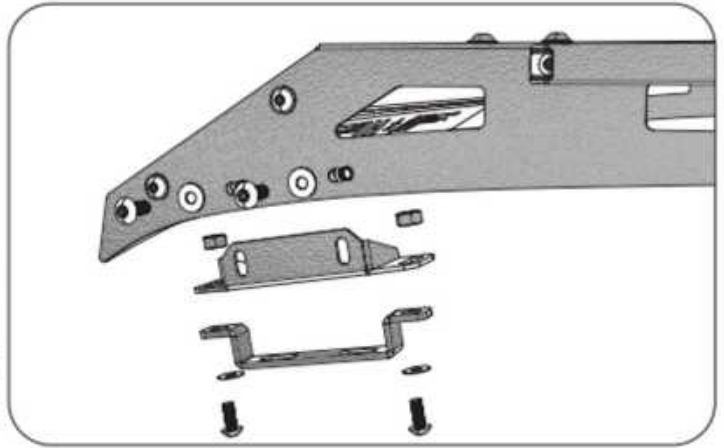

STEP.7 SECURE THE BACK PANEL WITH SCREWS



MOUNT THE BRACKET TO THE ROOF USING SCREWS WITH RUBBER GASKET WASHERS

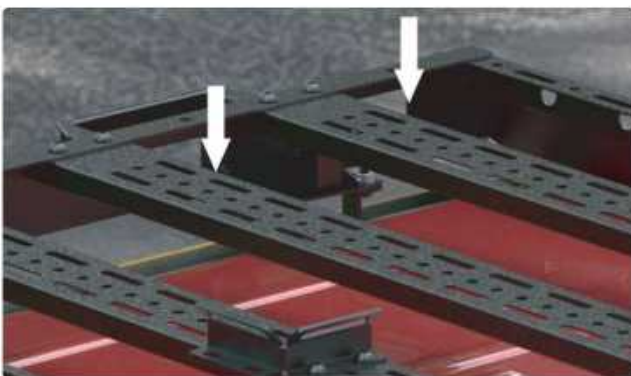

ASSEMBLY COMPLETED