
TGH.006-9

PLEASE NOTE:

Please read and understand the instructions before installation!
Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.
NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.



Contents:

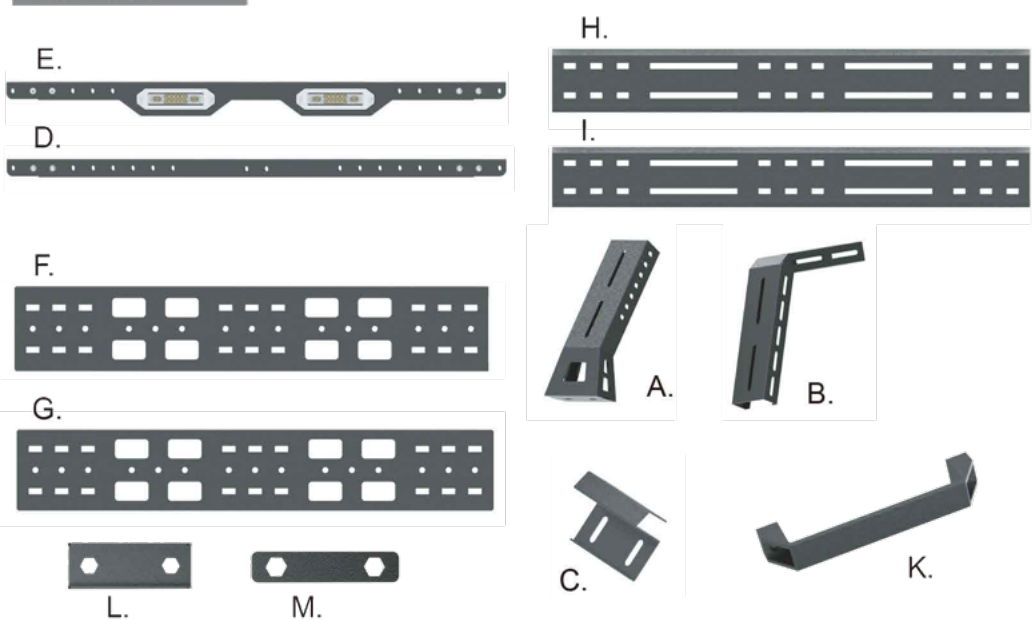


Flat Head Hex Socket Screw M8X20	Lock washer M8X20X1	Lock nut M8	Spring washer D6	Flat Head Screw M10*30	Lock washer M10X20X1	Lock nut M8
						

Before installation:

Read this instruction carefully before Start Installation.Proper tools will improve the quality of installation and reduce the timerequired.If missing parts or any damage found,please take a picture and contact us. Professional installation would be highly recommended.Periodic check to ensure all mounting hardware remains secure and tight.

Step1


Assemble the Part"A" &"B"*4
with those bolts(M,N,O)*8. As the picture show.

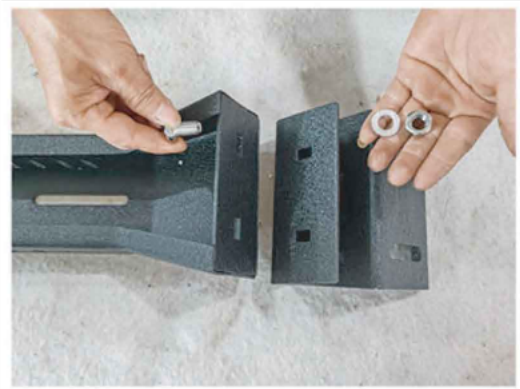



Step2

Assemble part"A,B"and"C"*4

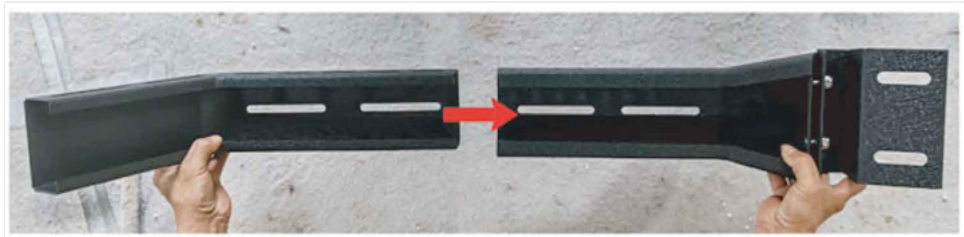





Step3


Assembled in the second step with "D,E"





Step4

Assemble the "F,G", with the parts from step 3.

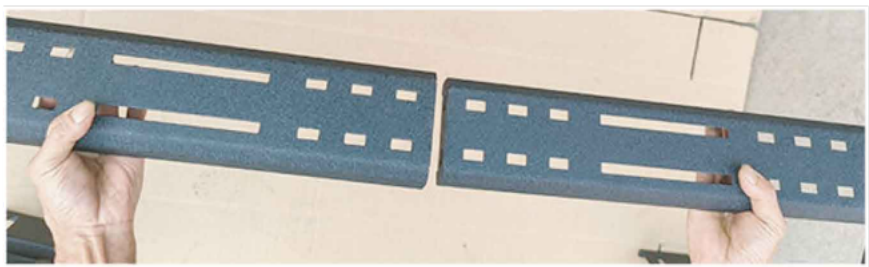


Dock Handrail Installation



Step5

assemble the parts to the vehicle

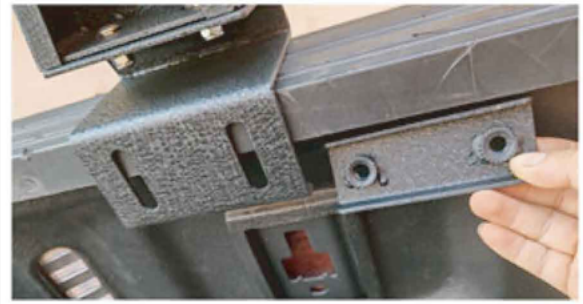







CONGRATULATIONS YOUR INSTALLATION HASBEEN COMPLETED

