

INSTALLATION INSTRUCTIONS

TGH-0003

Compatible with

1997-2006 Wrangler TJ

Tools are needed

8-22mm Socket


Impact Gun

BRACKET BASE -PART 1

 A01	X2	 A02	X2	 M8*25	X12
 M8*20*1	X16	 D8	X12	 M8	X4

STEP.1

First assemble the product, then proceed with the installation. Good tools can make the job easier and more efficient

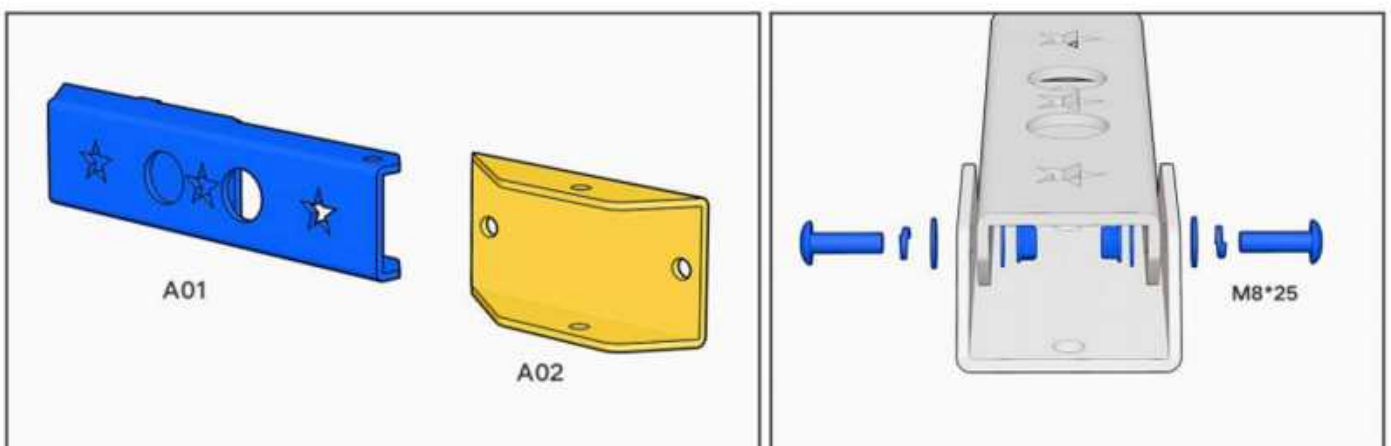


First, assemble the provided parts A01 and A02. As shown in the diagram, use the supplied M8 bolts to secure them in place, Do the same for the other side.


INSTALLATION INSTRUCTIONS

STEP.2

PREPARE ELECTRIC TOOLS BEFORE REMOVING THE BUMPER TO IMPROVE EFFICIENCY.

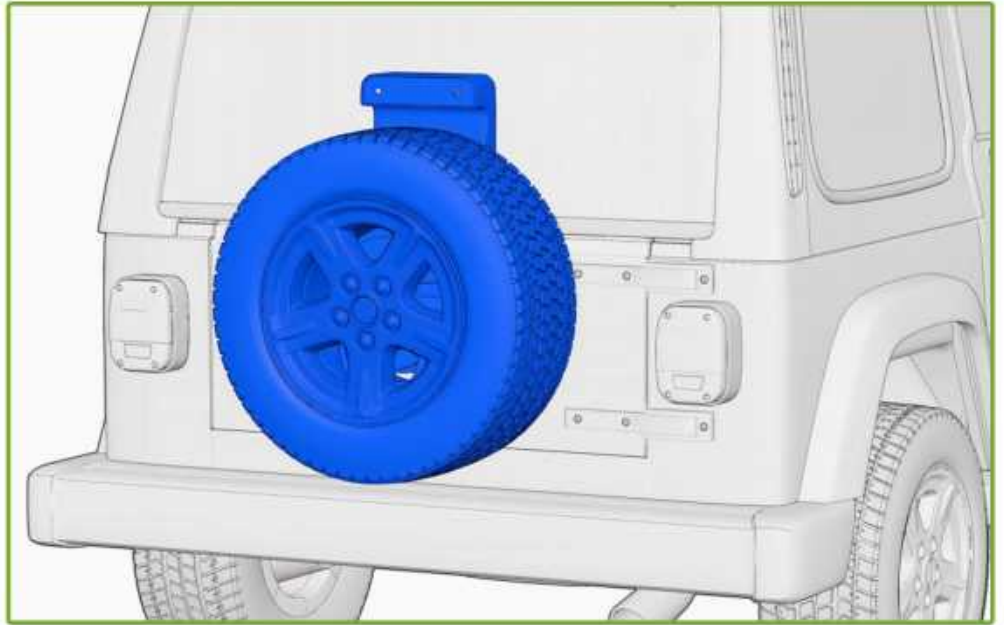


First, use a power tool to remove the spare tire and the taillights from the vehicle.

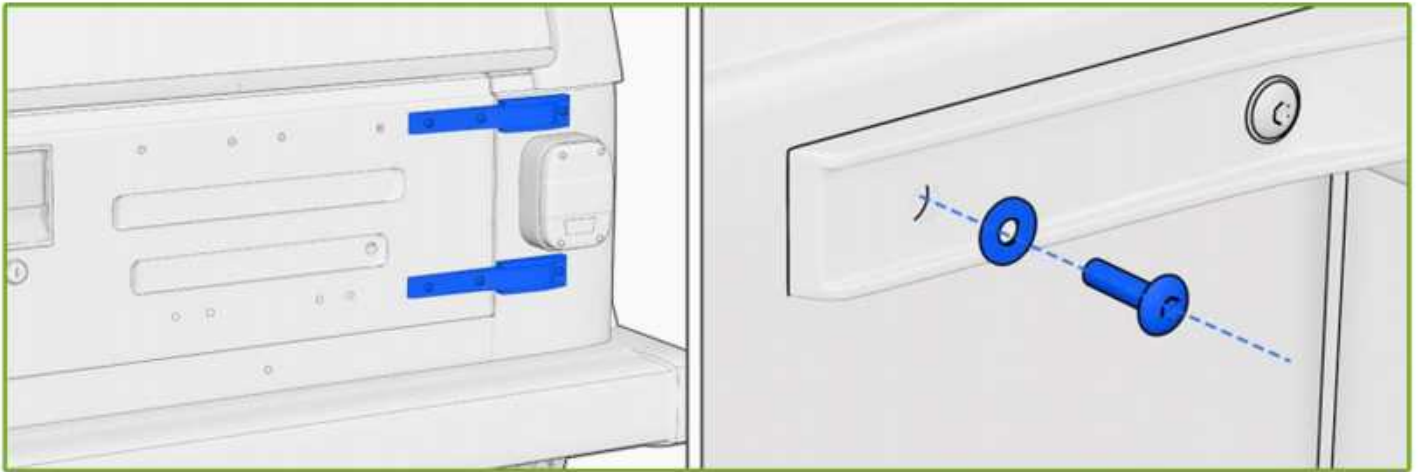


As shown in the diagram, after removing the spare tire and taillights, continue using a power tool to remove the original rear bumper chain from the vehicle.

INSTALLATION INSTRUCTIONS

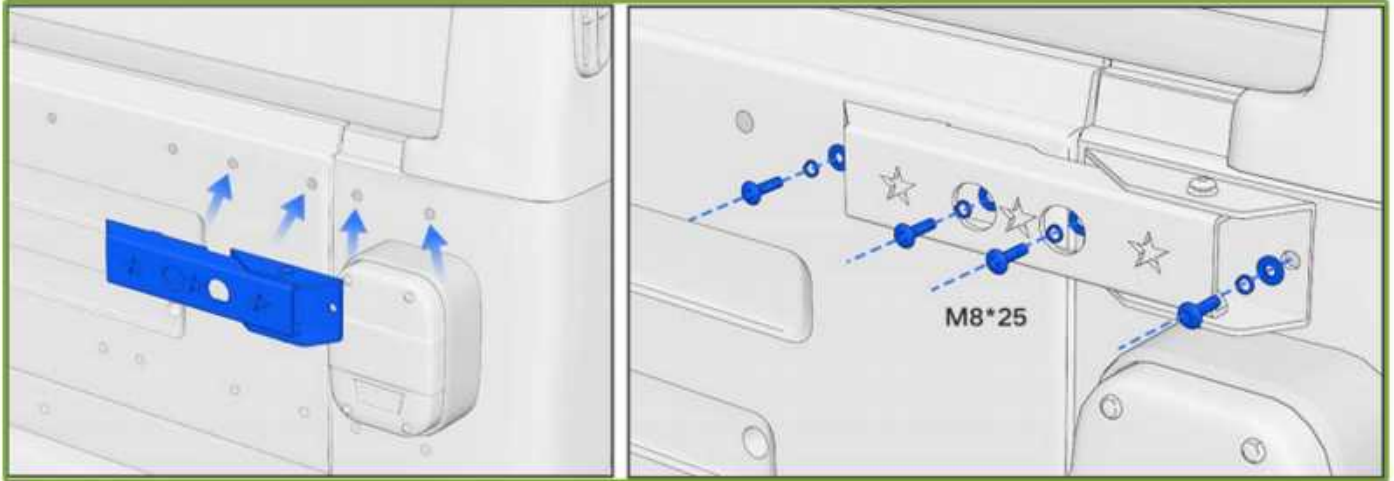

As shown in the diagram, align the pre-assembled tailgate hinge with the mounting holes, then use the supplied M8 bolts to install it. Repeat the same process for the other side.

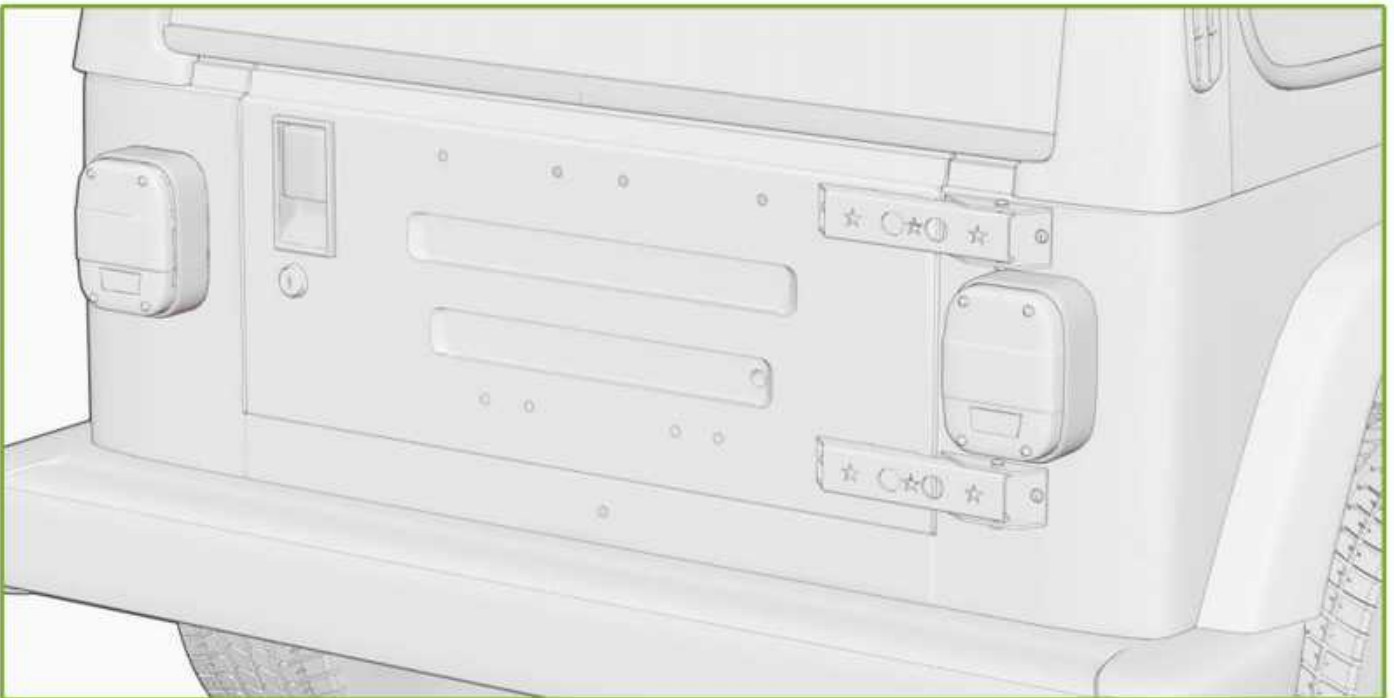

Congratulations on successfully replacing the tailgate hinges. Please regularly check the bolts to ensure they are not loose.