

INSTALLATION INSTRUCTIONS

TGH-0006

Compatible with

1987-2006 Wrangler Tu YJ LJ


Tools are needed

8-22mm Socket

4-10mm Allen Key


Impact Gun

BRACKET BASE -PART 1

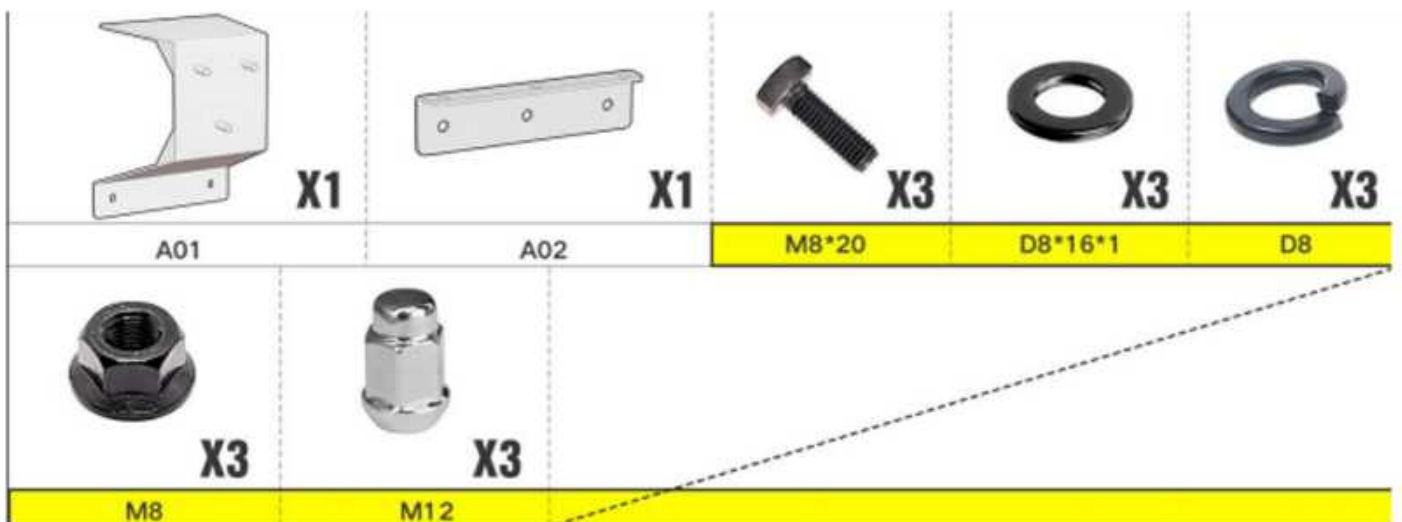

STEP.1

BEFORE INSTALLATION, MAKE SURE YOU HAVE THE NECESSARY TOOL-READY. GOOD TOOLS CAN MAKE THE JOB TWICE AS EFFICIENT.

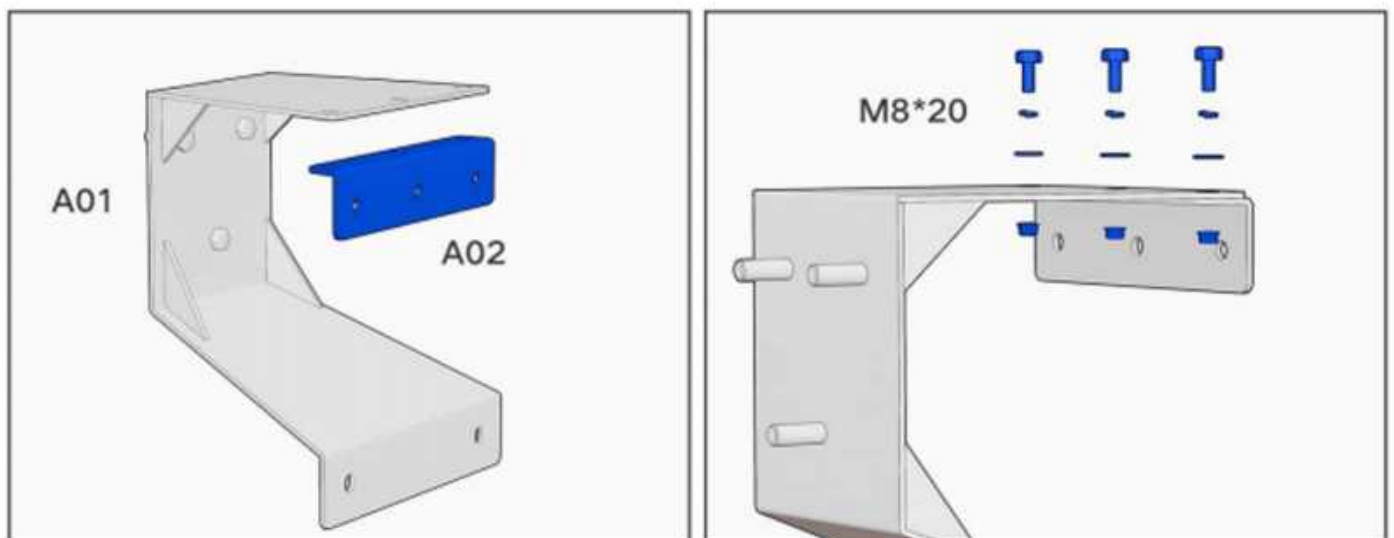


As shown in the diagram, first assemble the provided main part A01 with bracket A02, and secure them using the supplied M8 bolts



INSTALLATION INSTRUCTIONS

STEP.2

PREPARE ELECTRIC TOOLS REMOVING THE TO IMPROVE EFFICIENCY.

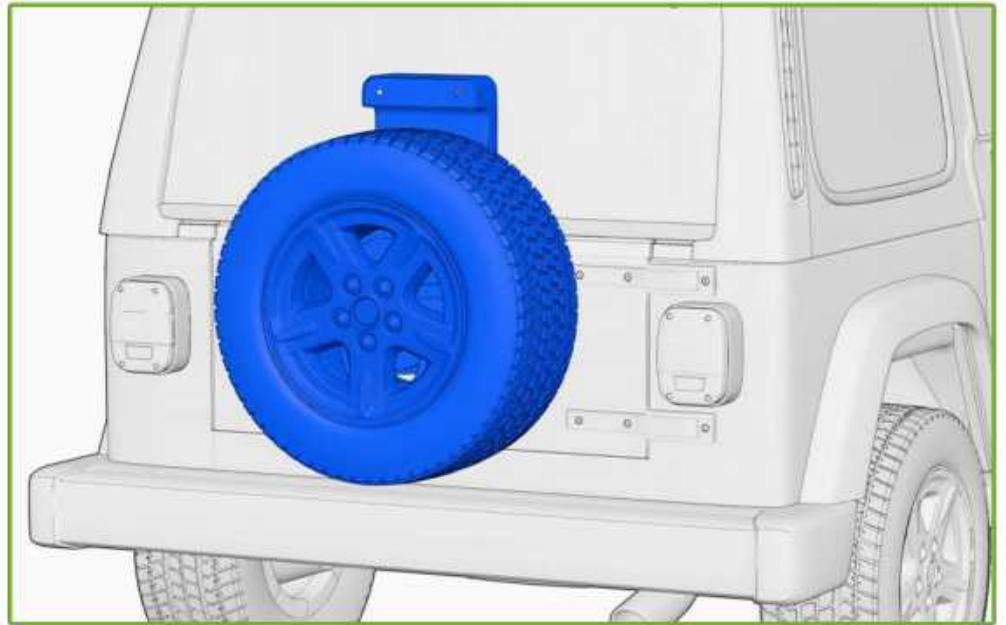

As shown in the diagram, first remove the spare tire and the tall lights from the vehicle. Be sure to keep the original bolts, as they will be used for reinstallation later.

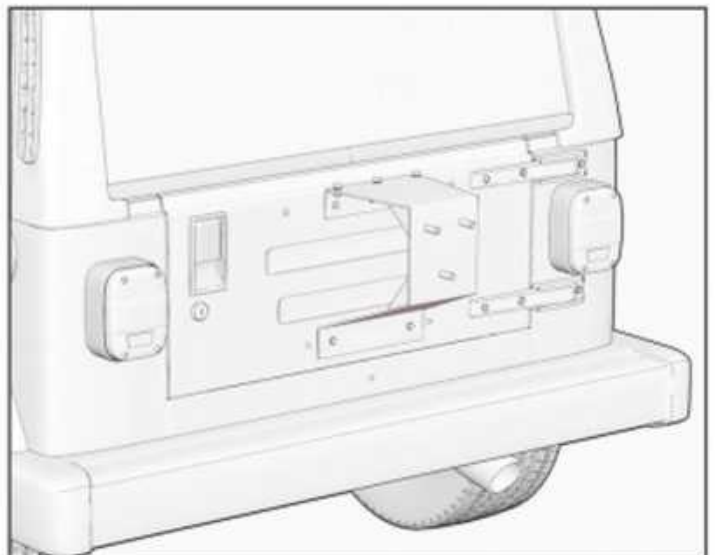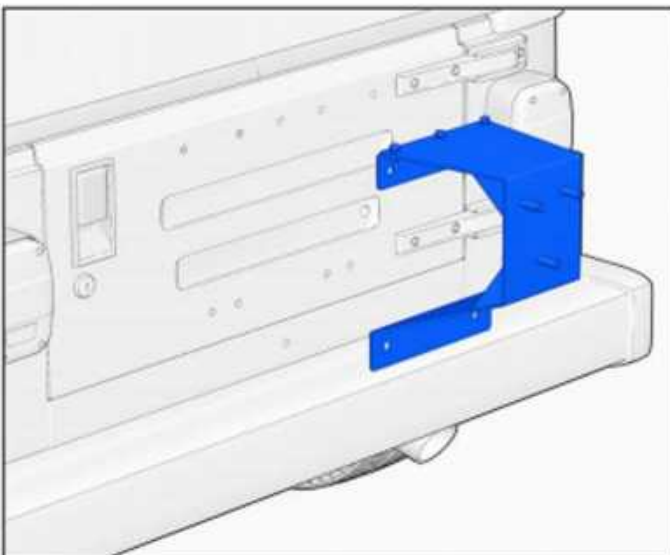

As shown in the diagram, align the assembled spare tire bracket with the mounting holes, then use the original bolts to securely fasten it in place.