

INSTALLATION INSTRUCTIONS


TGH.1002

INSTALLATION TIME

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.

CONTENTS

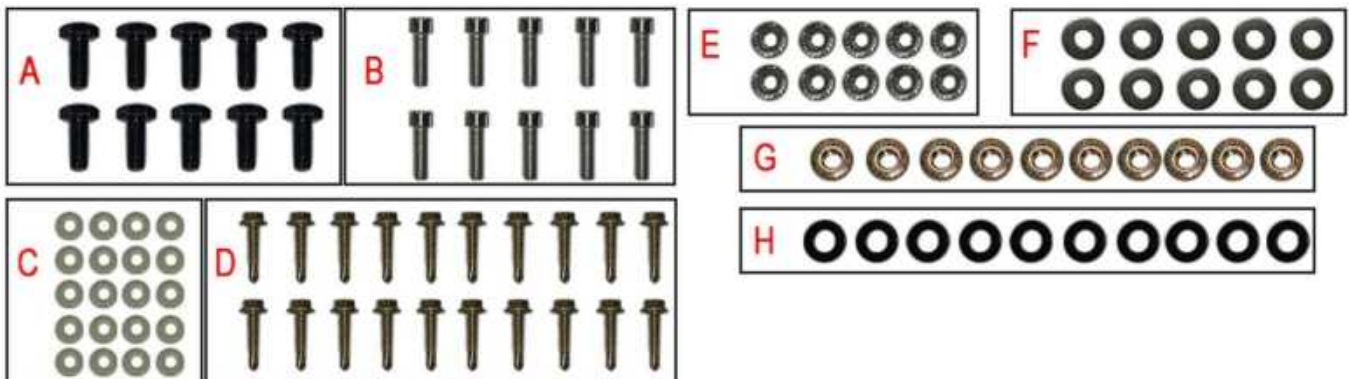

Tools required:

8mm and 10mm wrench. 1/4 inner hexagon socket

8mm and 14mm Socket Wrench

(If necessary, need Drill and Drill bit for the screws, because we cannot make sure your jeep have corresponding screw holes)



INSTALLATION INSTRUCTIONS


INSTALLATION TIME

About 1 hour, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

STEP.1

Unbox the Fender Flares. Then you will get the fender flares like the picture shows below.

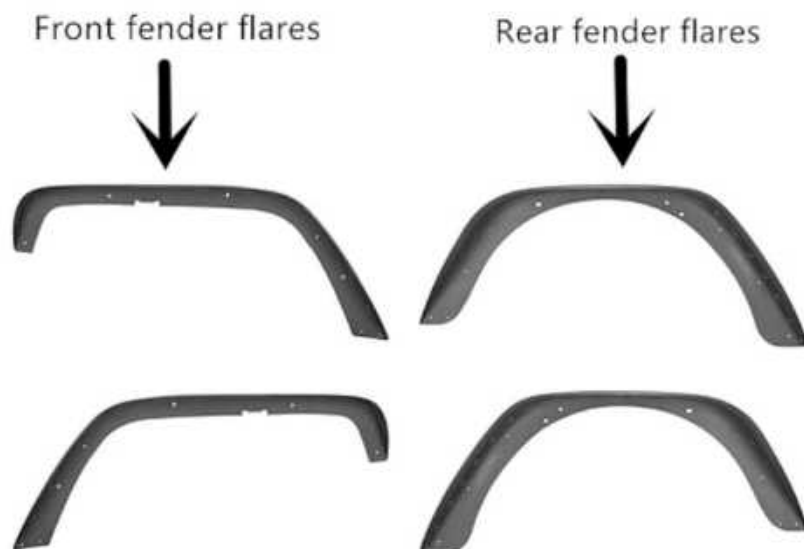

STEP.2


Started on the passenger side, but you can do either first. And there just 6 screw holes on the vehicle. But the fender flare have two more holes on it. But if your jeep have the two holes. Then you can easily to install the fender flare with the corresponding screws, washers and nuts. But if not, and you want the fender flare to be more stable after installation, then you need to drill the two screw holes. This is up to you. The pictures as shown below.



INSTALLATION INSTRUCTIONS

STEP.3

Then according to the corresponding screw holes install the front fender flare. And according to the fender flare's holes to choose the 3 kind of screws. As shown below.

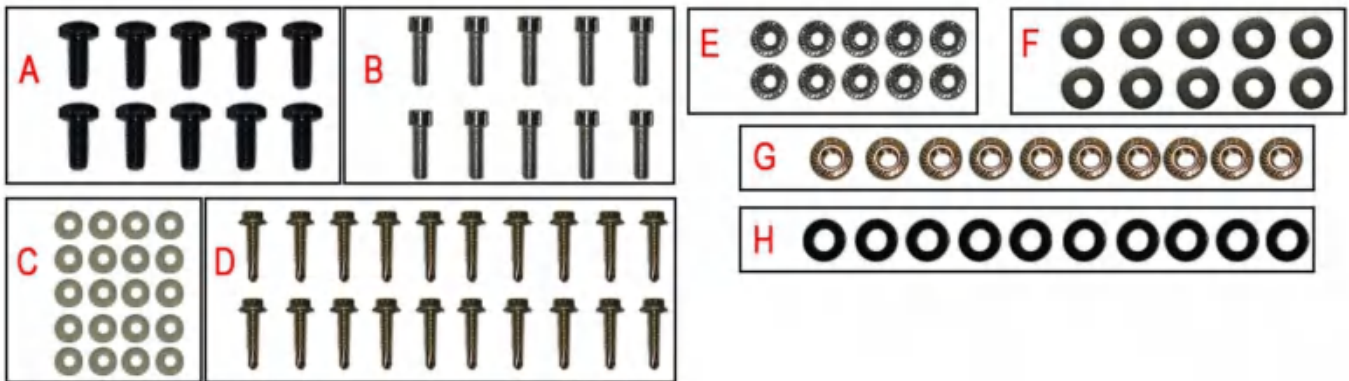

How to install the bolts:

- (1) Part "A" ,Part "G" ,Part "H" will be installtogether ;
- (2) Part "B" ,Part "E" ,Part "F" will be installtogether;
- (3) Part "D" ,Part "C" will be install together ;

Install the front fender with the Part "A" , Part "B" and Part "D" .




INSTALLATION INSTRUCTIONS



STEP.4


The rear fender flare have 10 screws on it, but the jeep just have 8 corresponding screw holes. So the installation of rear fender flare just like what we said in step 2.

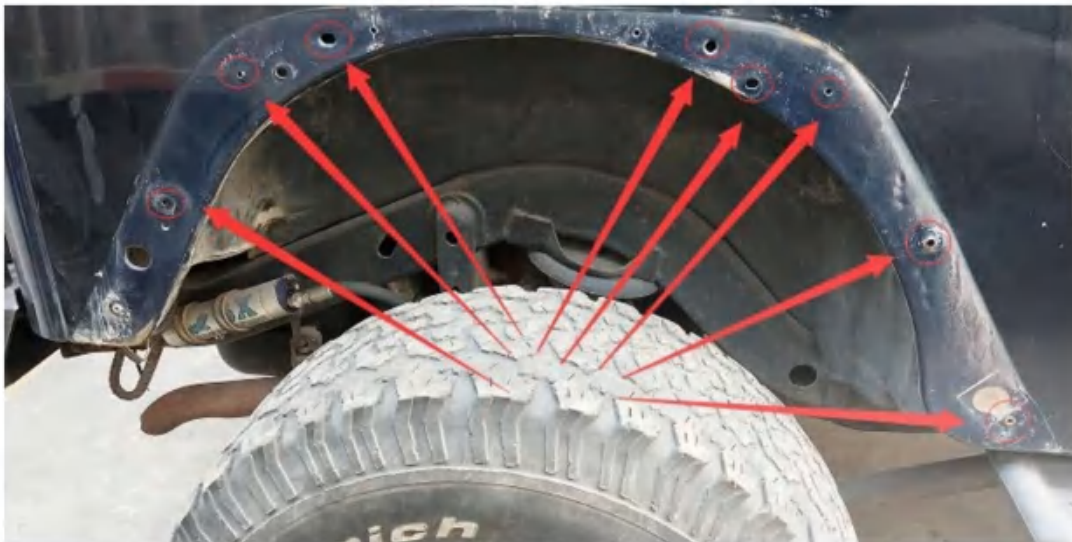

INSTALLATION INSTRUCTIONS

STEP.5

After the step 4, then repeat the method of the step 3.

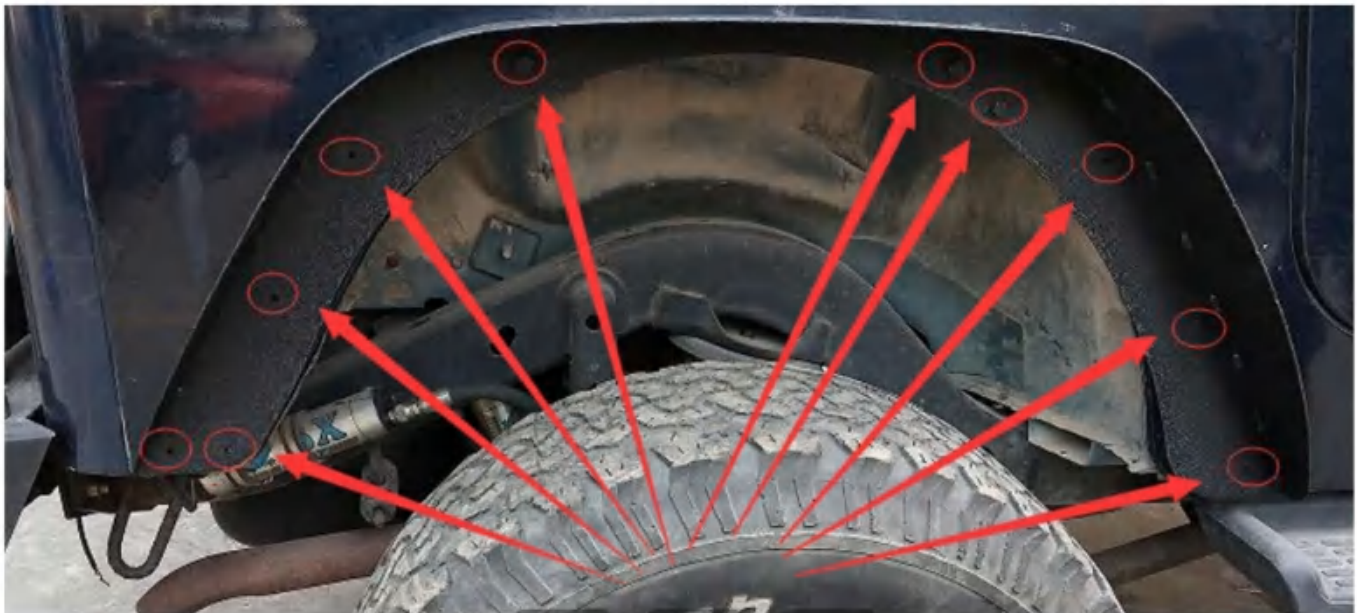

STEP.6

Now the passenger side will be complete installation.



INSTALLATION INSTRUCTIONS

STEP.7

The installation method on the driver side is the same as the one on the passenger side.

STEP.8

Installation completed.

