

INSTALLATION INSTRUCTIONS

TGH.2048

INSTALLATION TIME

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.


Driver Side




Passenger Side



Front

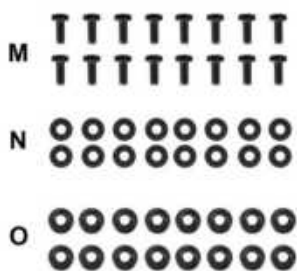

Rear

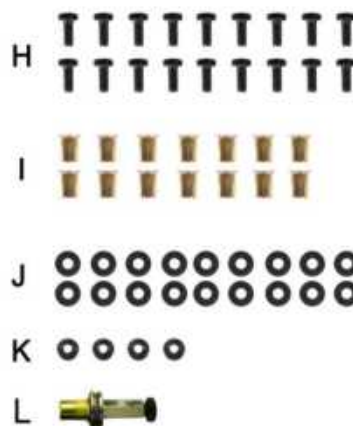

Tools required:

- a. 13mm Wrench;
- b. 13mm Socket Wrench;
- c. One Drill;
- d. 11mm Drill bit;
- e. M10 Pneumatic Rivet Nut Setting Kit



INSTALLATION INSTRUCTIONS

Installation time:

About 1-2 hours, 1-2 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

STEP.1

Remove the original fender flares first. As shown below.



STEP.2

Install the front fender flare with the PART" M" ,PART" N" & PART" O" .



INSTALLATION INSTRUCTIONS



STEP.3

After "Step2" ,then install the rear fender flare.



(1)The red circle install the PART" I" ,PART" H" & PART" J" .
Install the PART" I" by the hand operated tool(PART" L").

INSTALLATION INSTRUCTIONS



(2)The Yellow Mark install the PART" K" ,PART" H" & PART" J" .



INSTALLATION INSTRUCTIONS

STEP.4

Repeat above steps for the passenger side.

STEP.5

After the step 4, then repeat the method of the step 3.

