

INSTALLATION INSTRUCTIONS


TGH.2619-9

IMPORTANT

Please read and understand all instructions before starting this installation. The manufacturer holds no responsibility for any personal injury or damage sustained to vehicle during installation or use of this product.

CAUTION: This product is designed primarily to enhance the appearance of this vehicle and in no way will prevent damage to vehicle, personal injury or death in the event of an accident.

CONTENTS

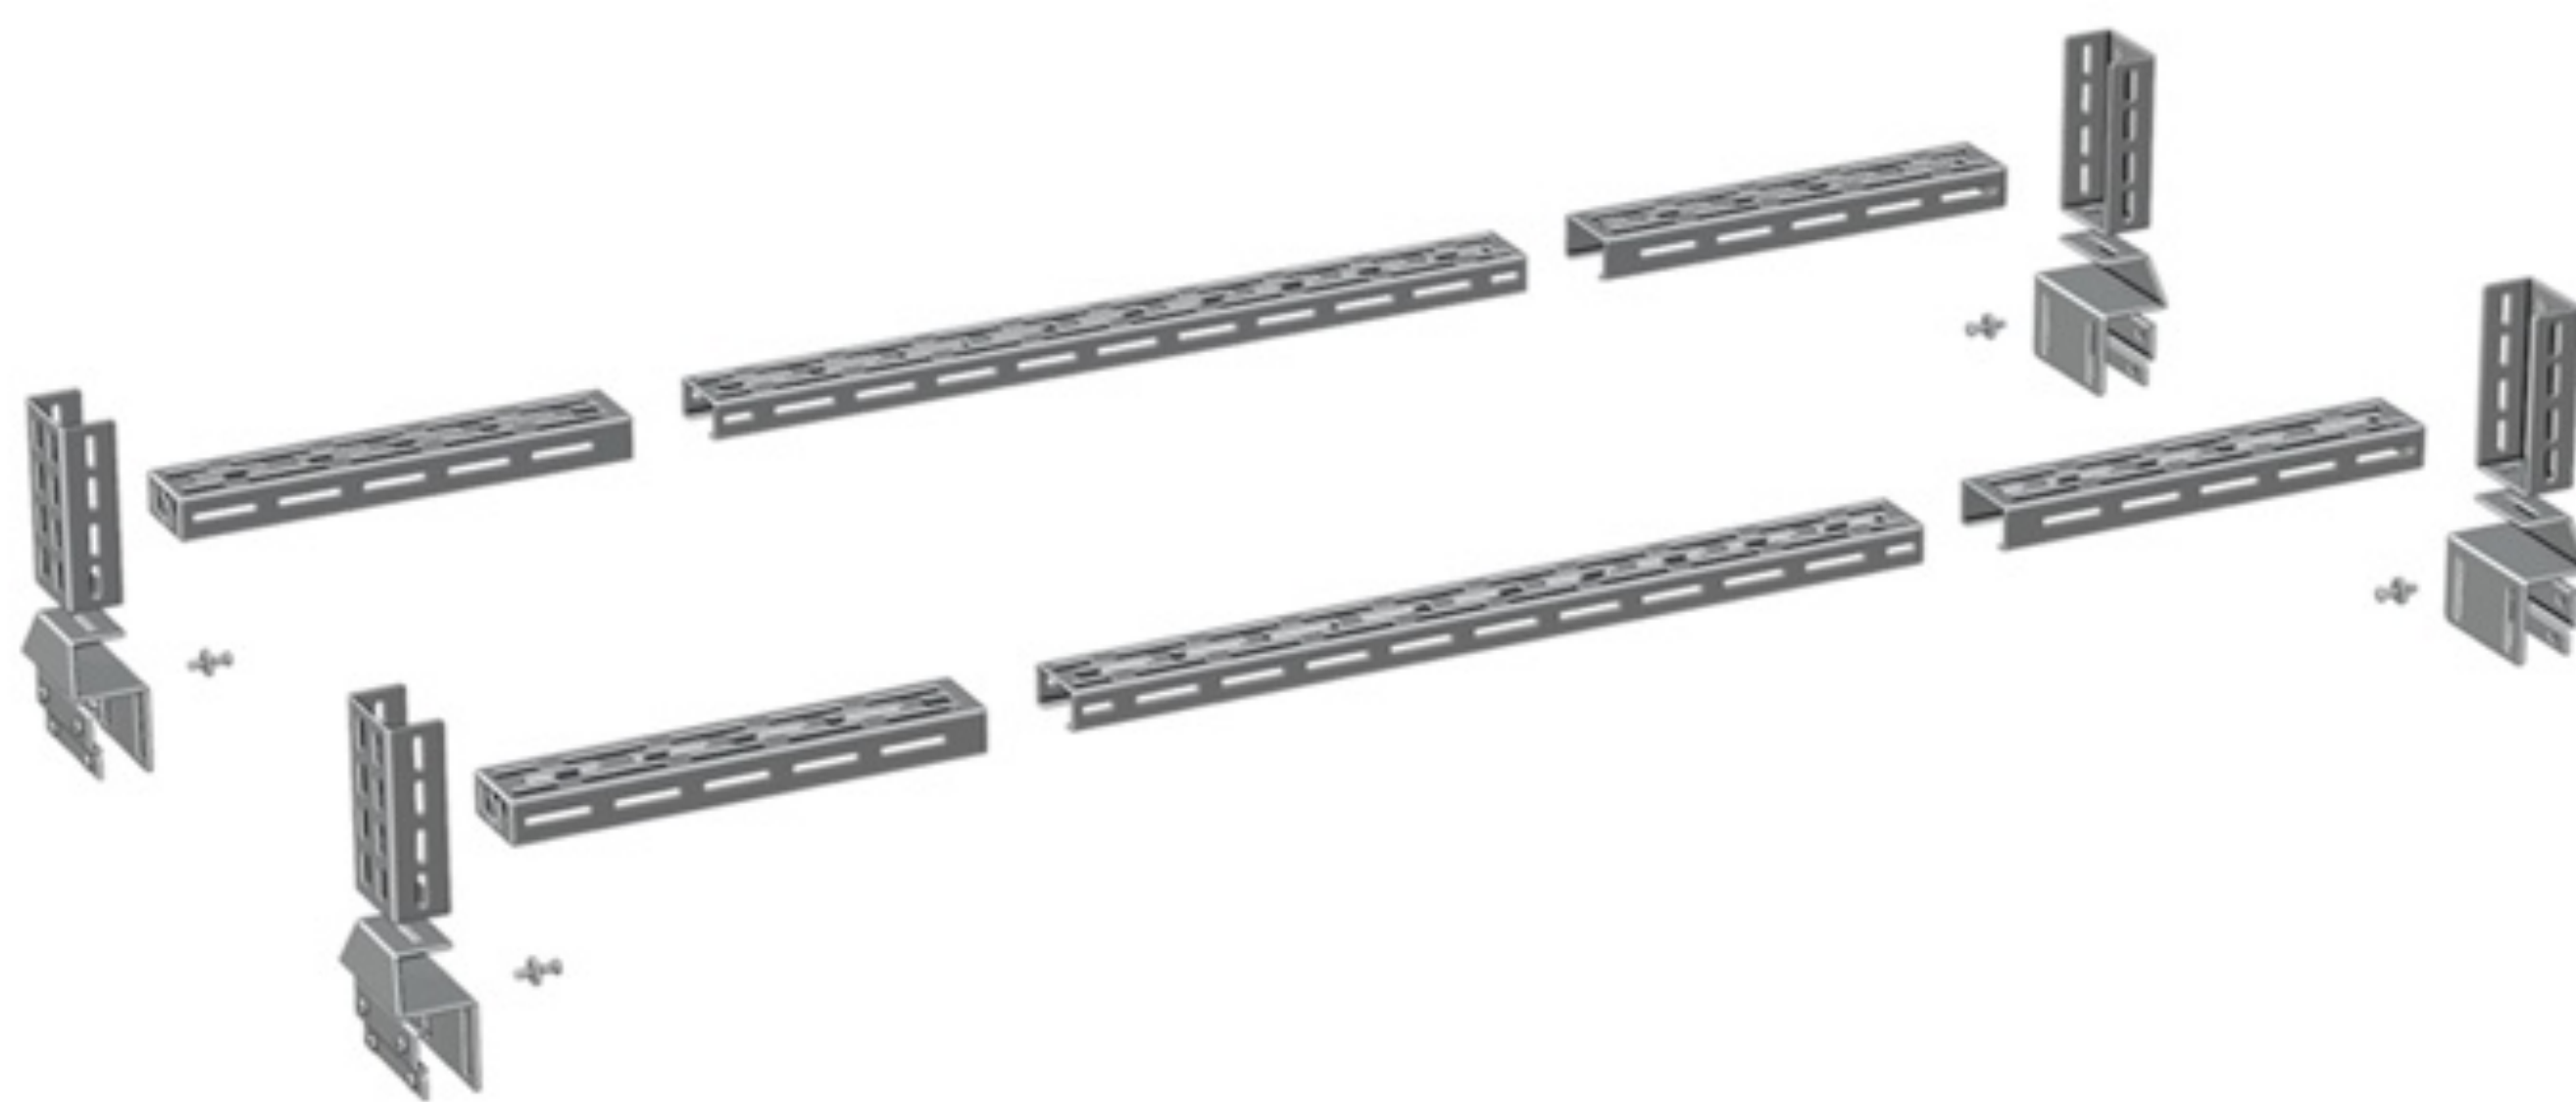


A  X2	B  X4	
C  X4	D  X4	E  X4

No.	Name	Model	Unit	Quantity	Surface Treatment	Accessory Picture	Remarks
1	Hexagon Head Bolt M8	M8*20	PCS	8	Black Zinc		For Base Connection
2	Spring Washer	D8	pcs	8	Black Zinc		
3	Flat Washer M8	M8*16*1	pcs	8	Black Zinc		
4	Flange Nut M8	M8	pcs	8	Black Zinc		
5	Pan Head Bolt M8	M8*20	pcs	16	Black Zinc		
6	Flange Nut M8	M8	pcs	16	Black Zinc		
7	Flat Washer M8	M8*16*1	pcs	16	Black Zinc		
8	Spring Washer	D8	pcs	16	Black Zinc		

INSTALLATION INSTRUCTIONS

INSTALLATION



Installation of the main picture frame

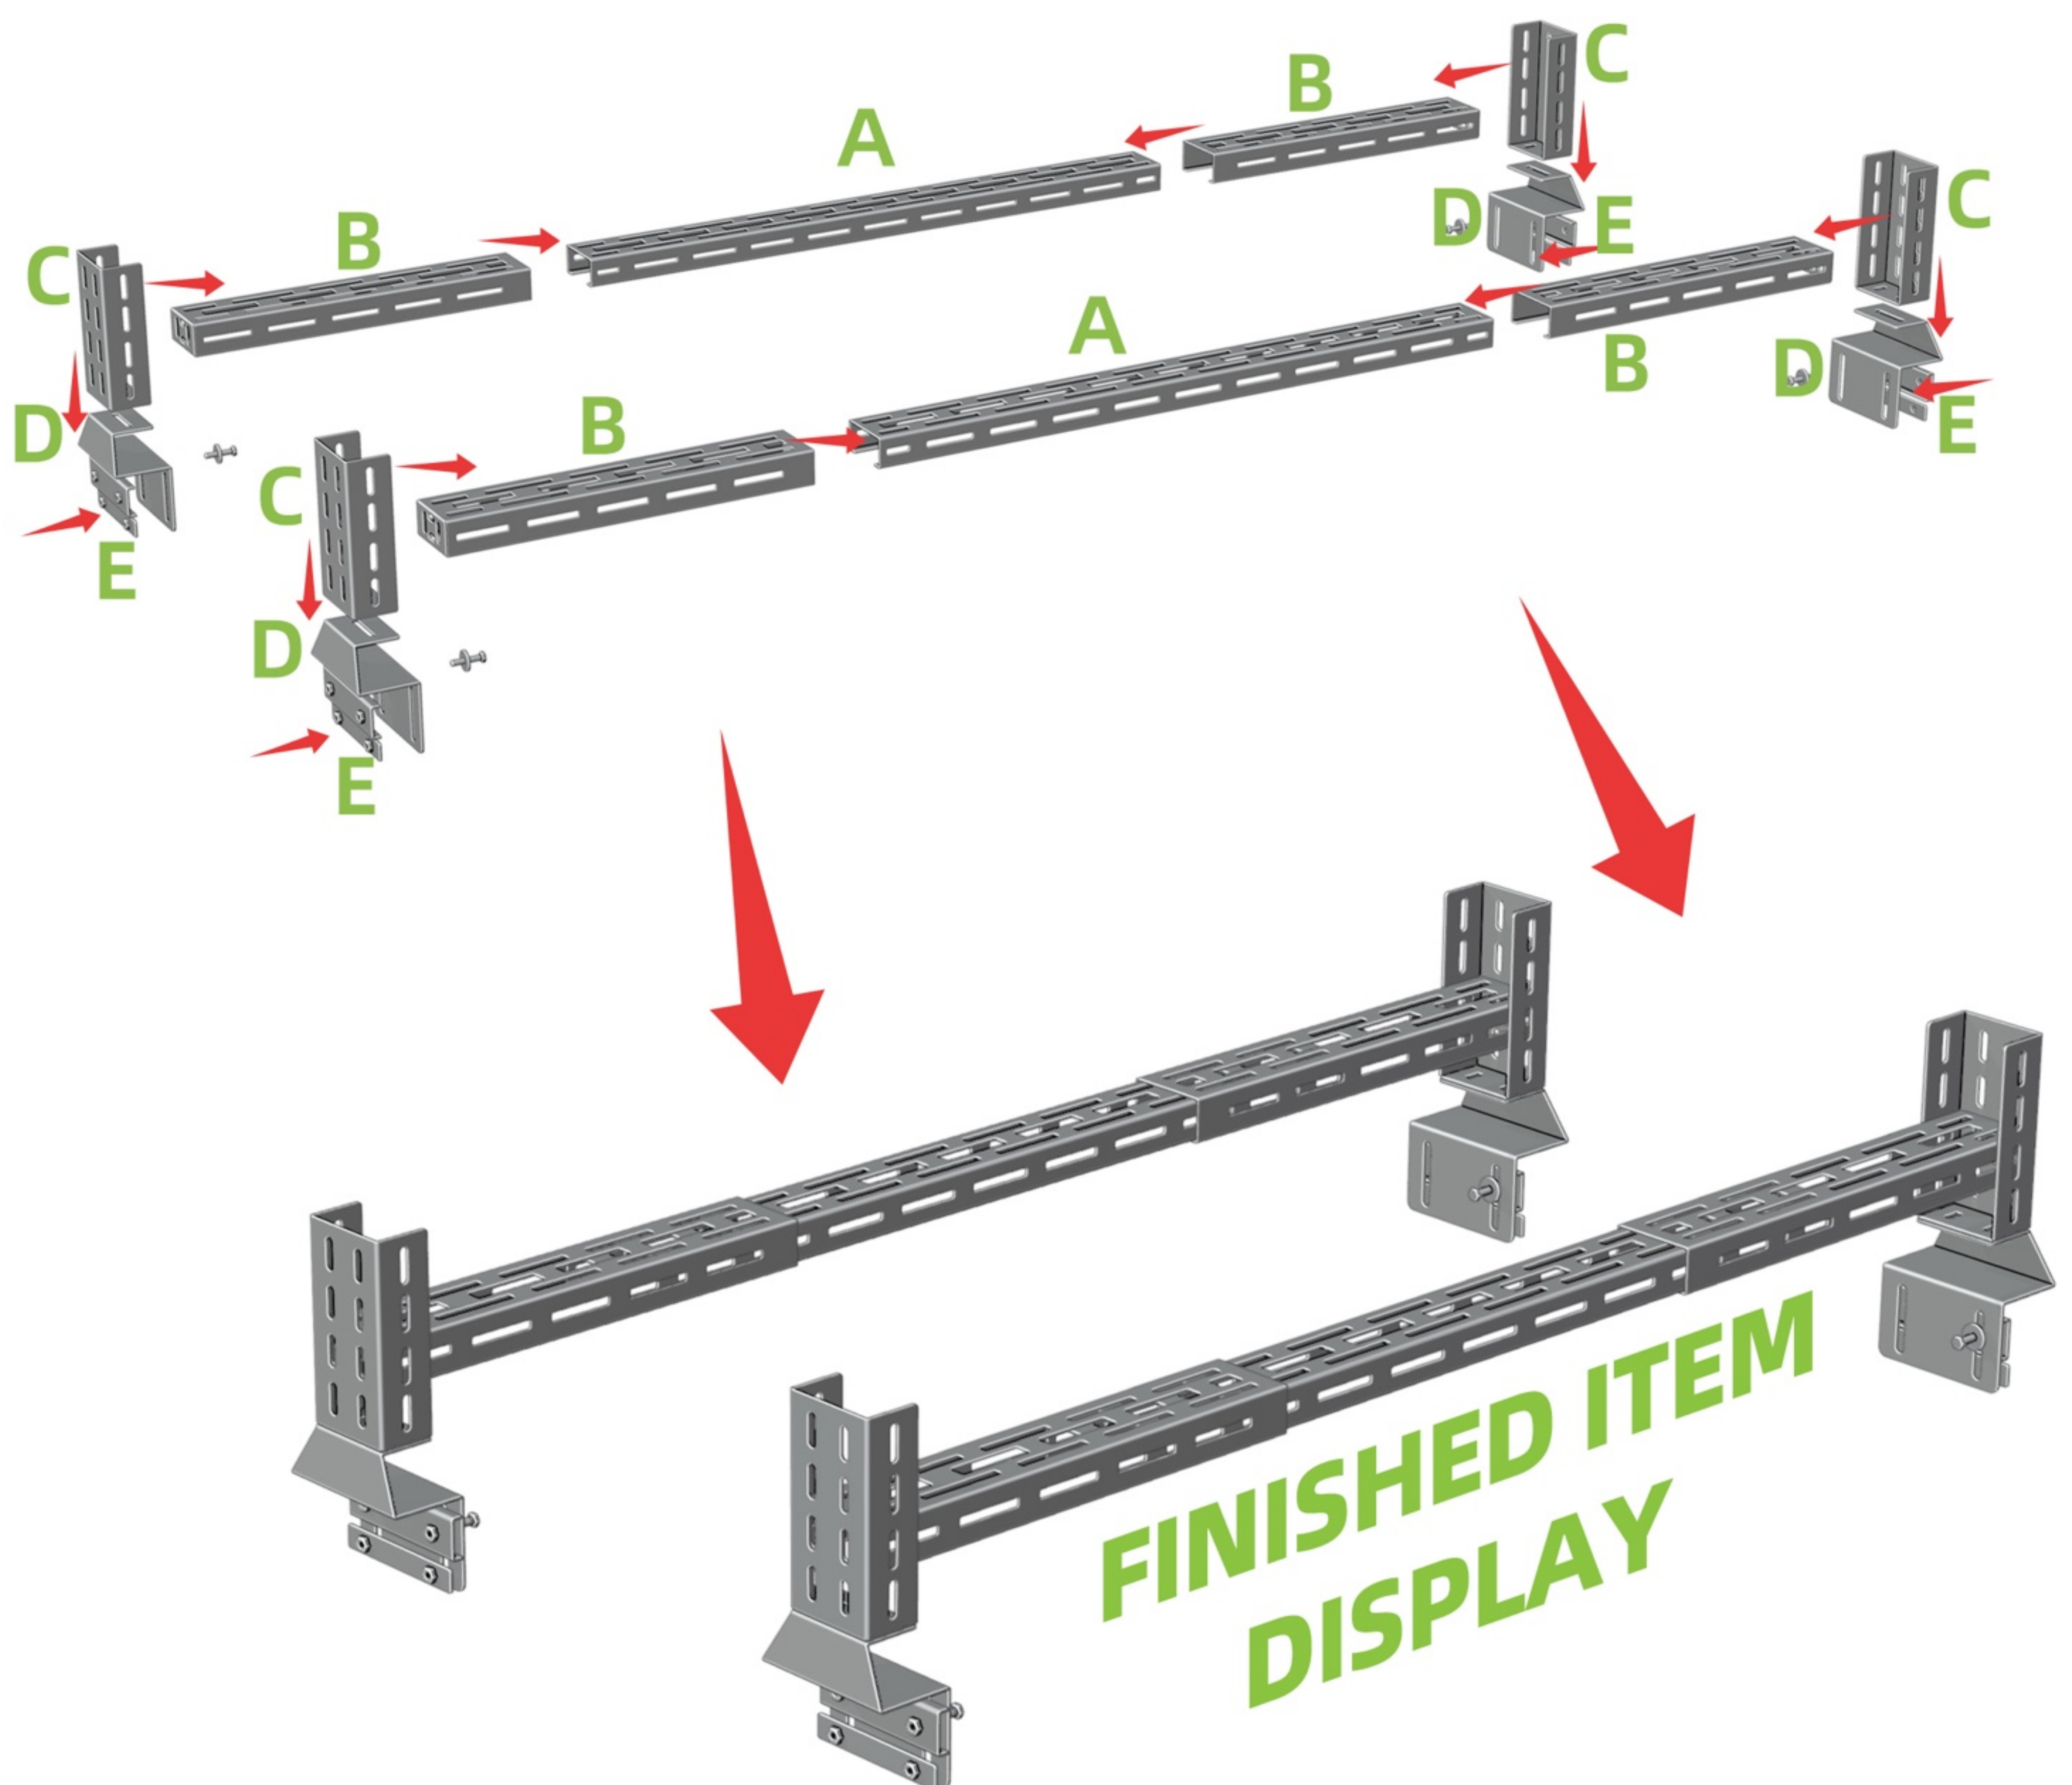

INSTALLATION INSTRUCTIONS



STEP 1

Assemble the Part "C" & "D"

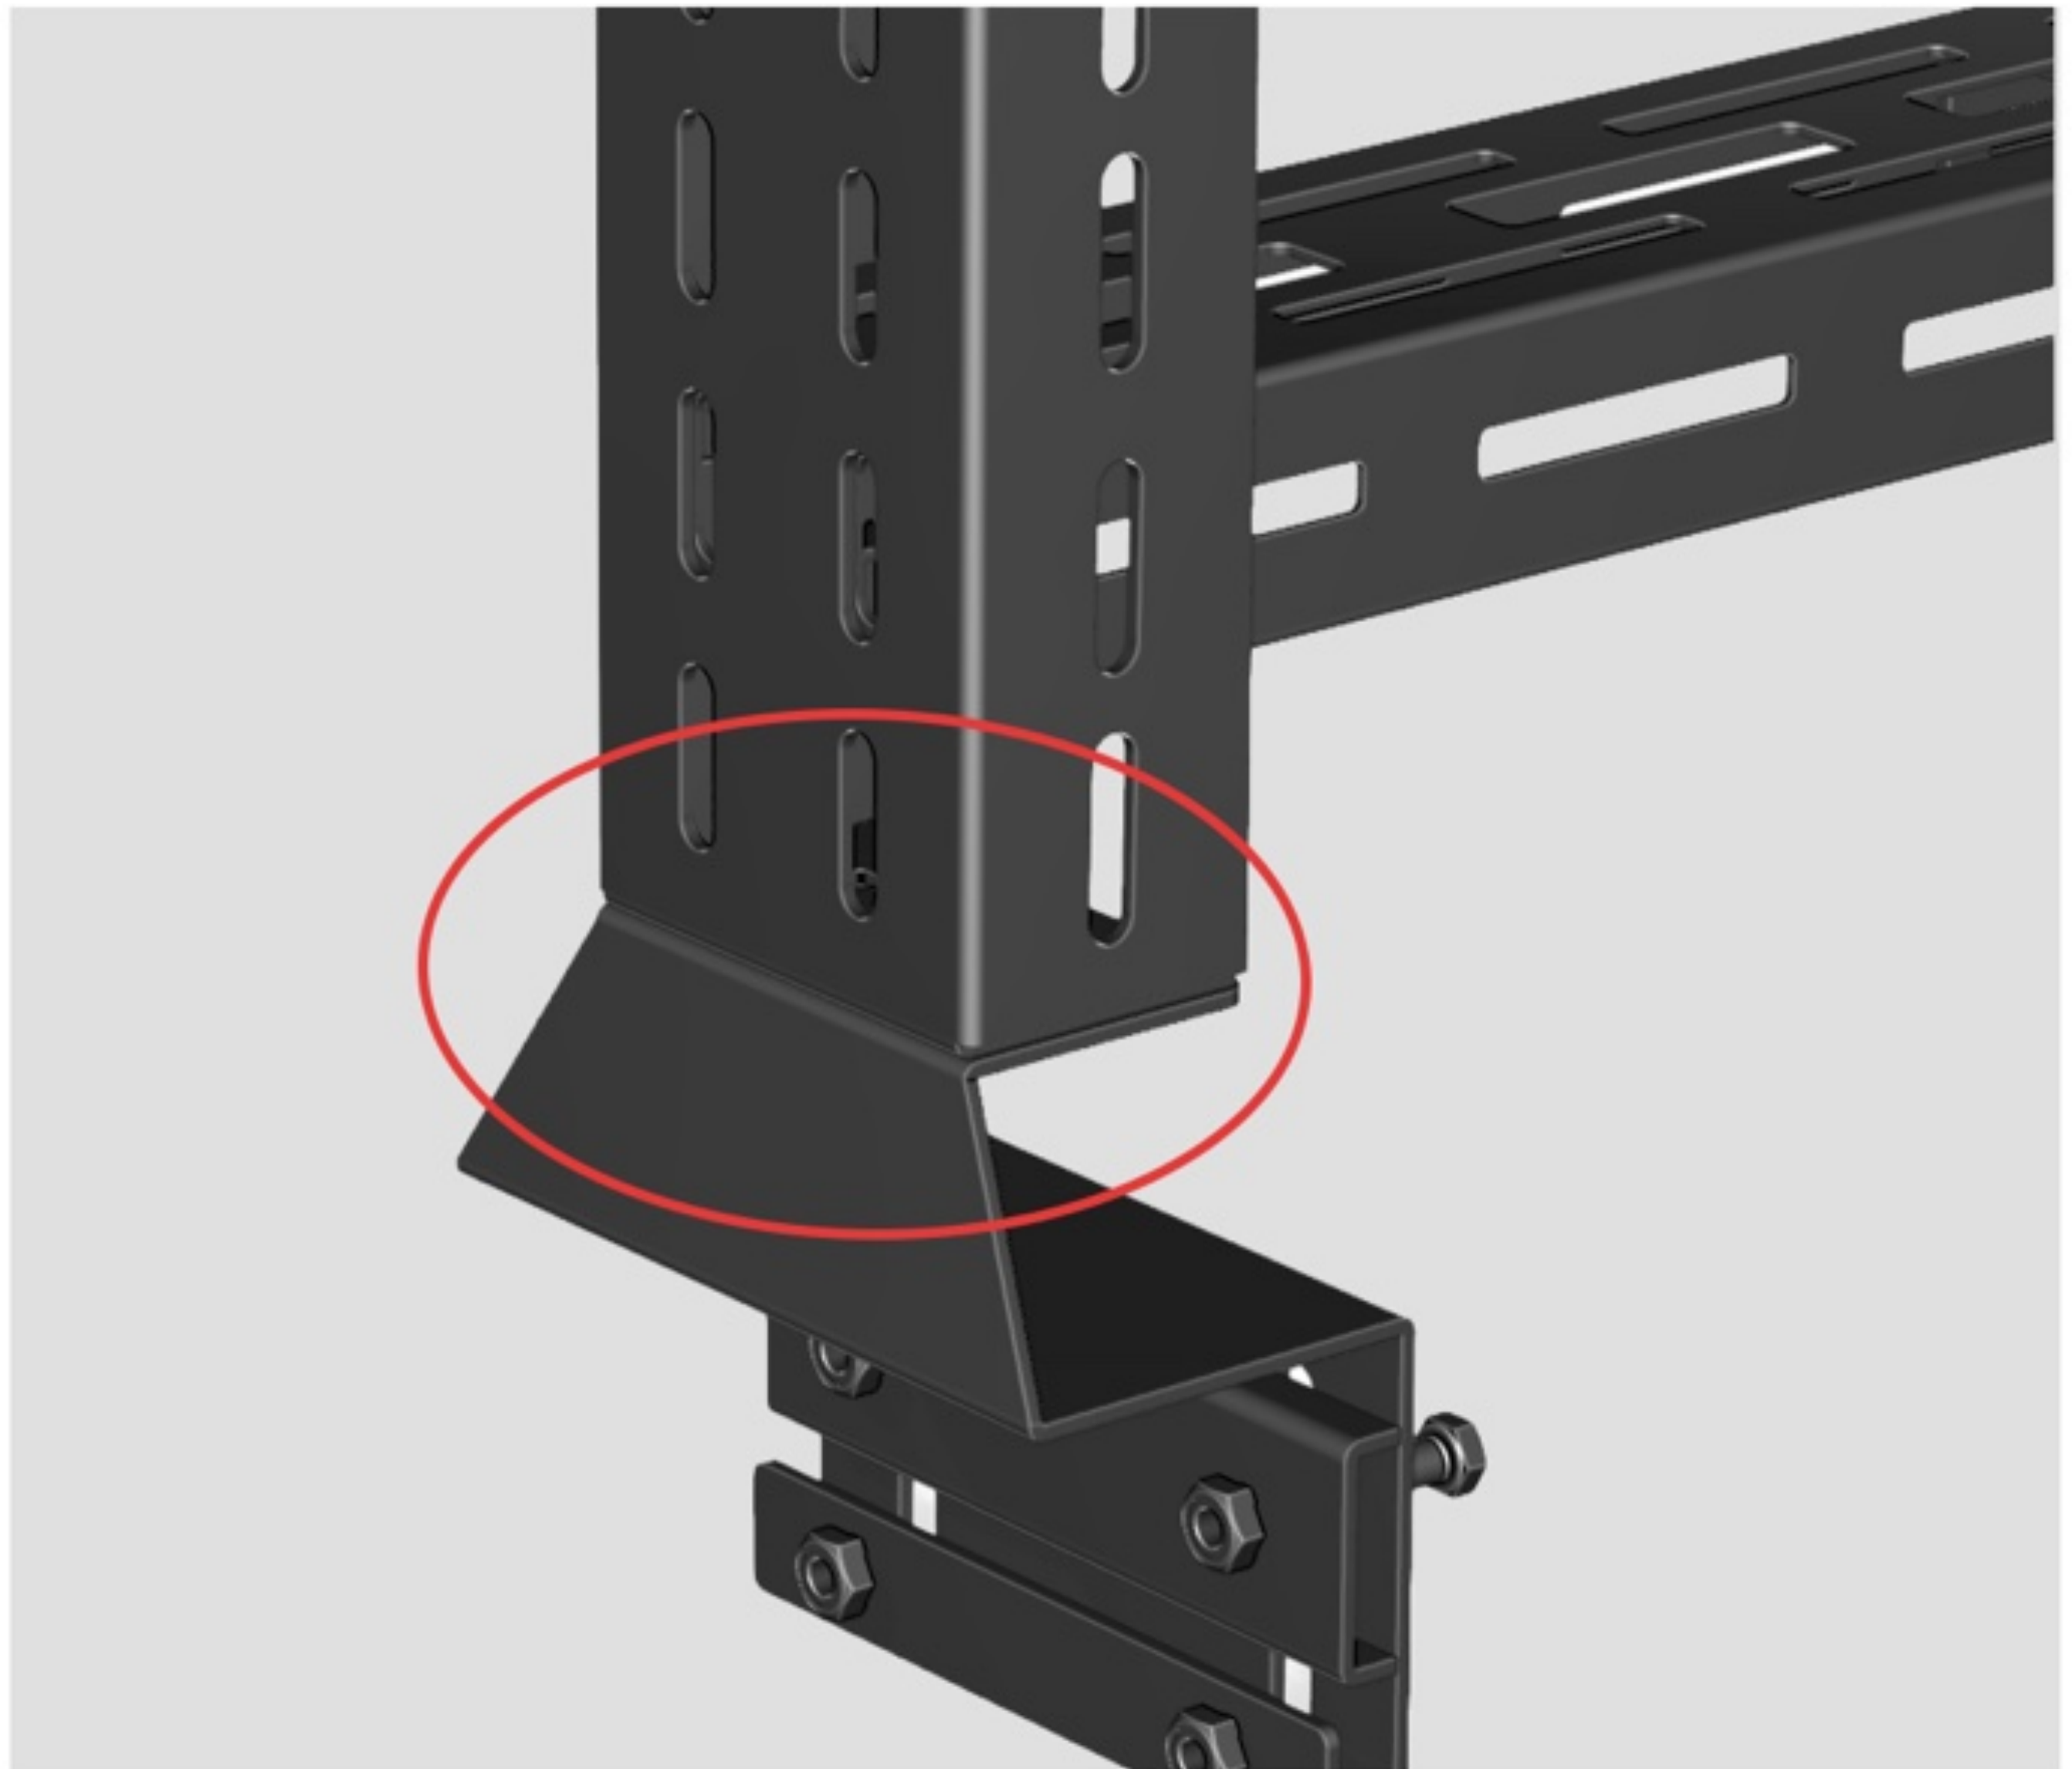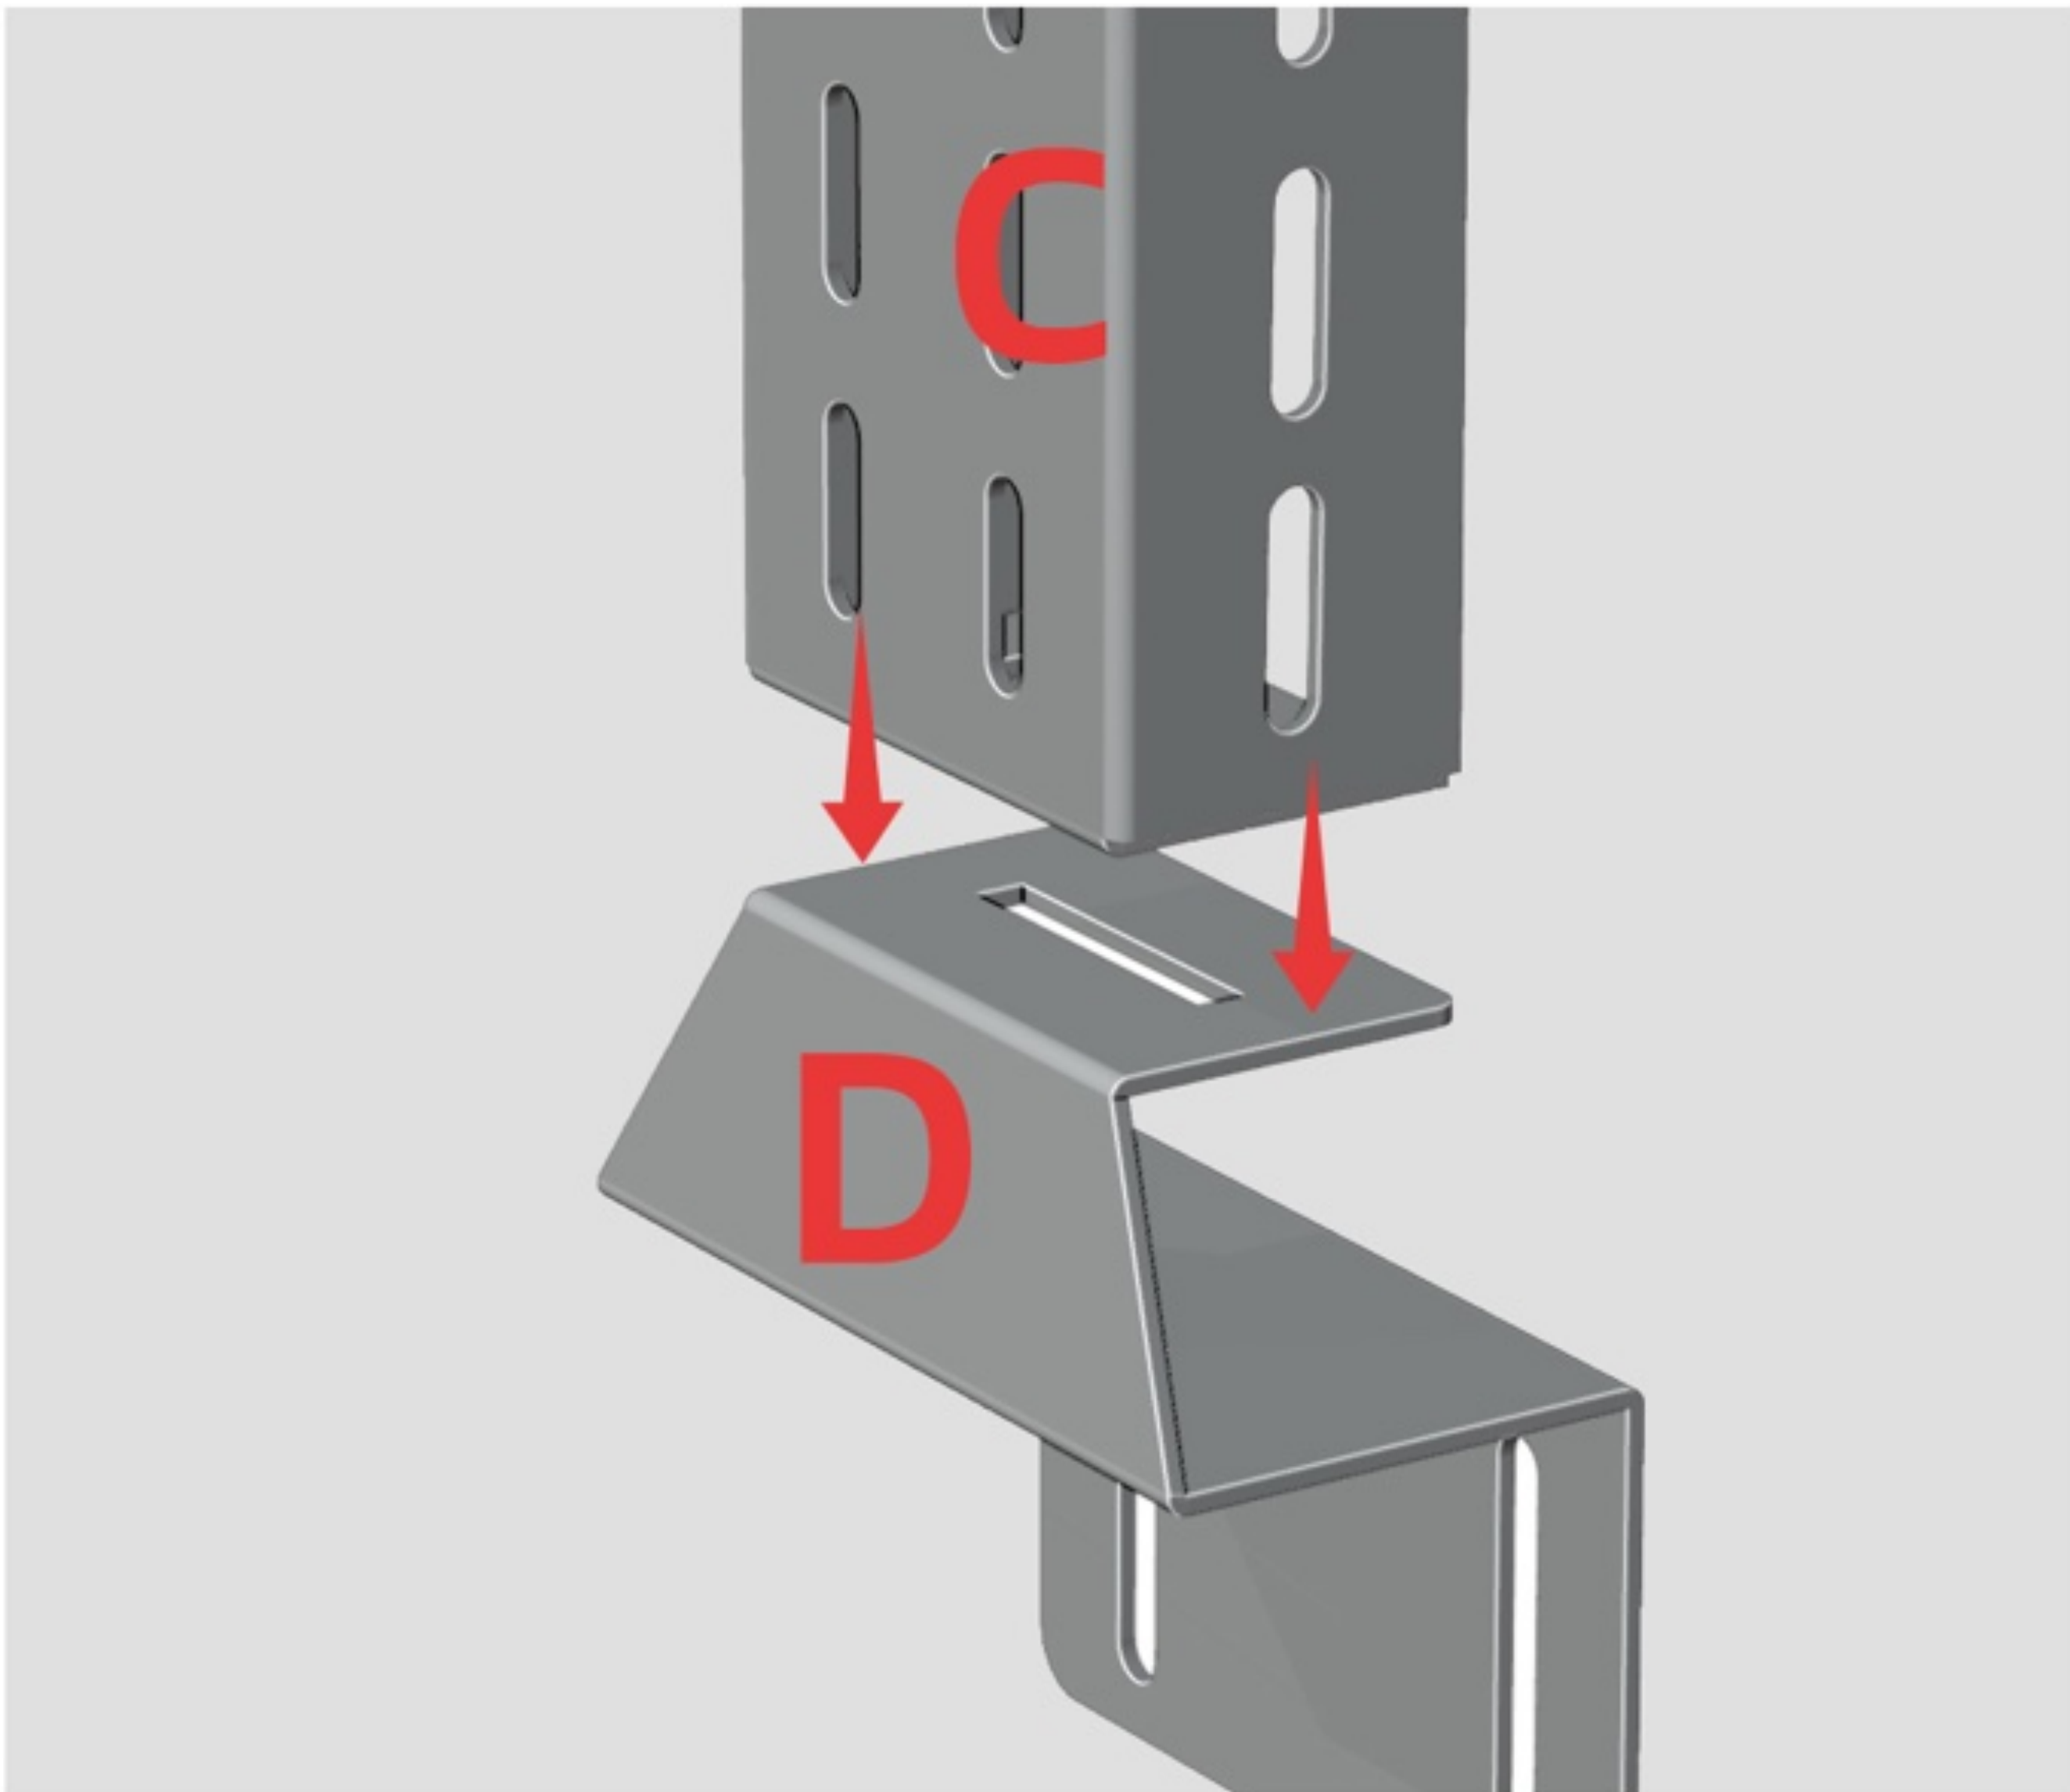

STEP 2

Assemble the Part "C" & "B"

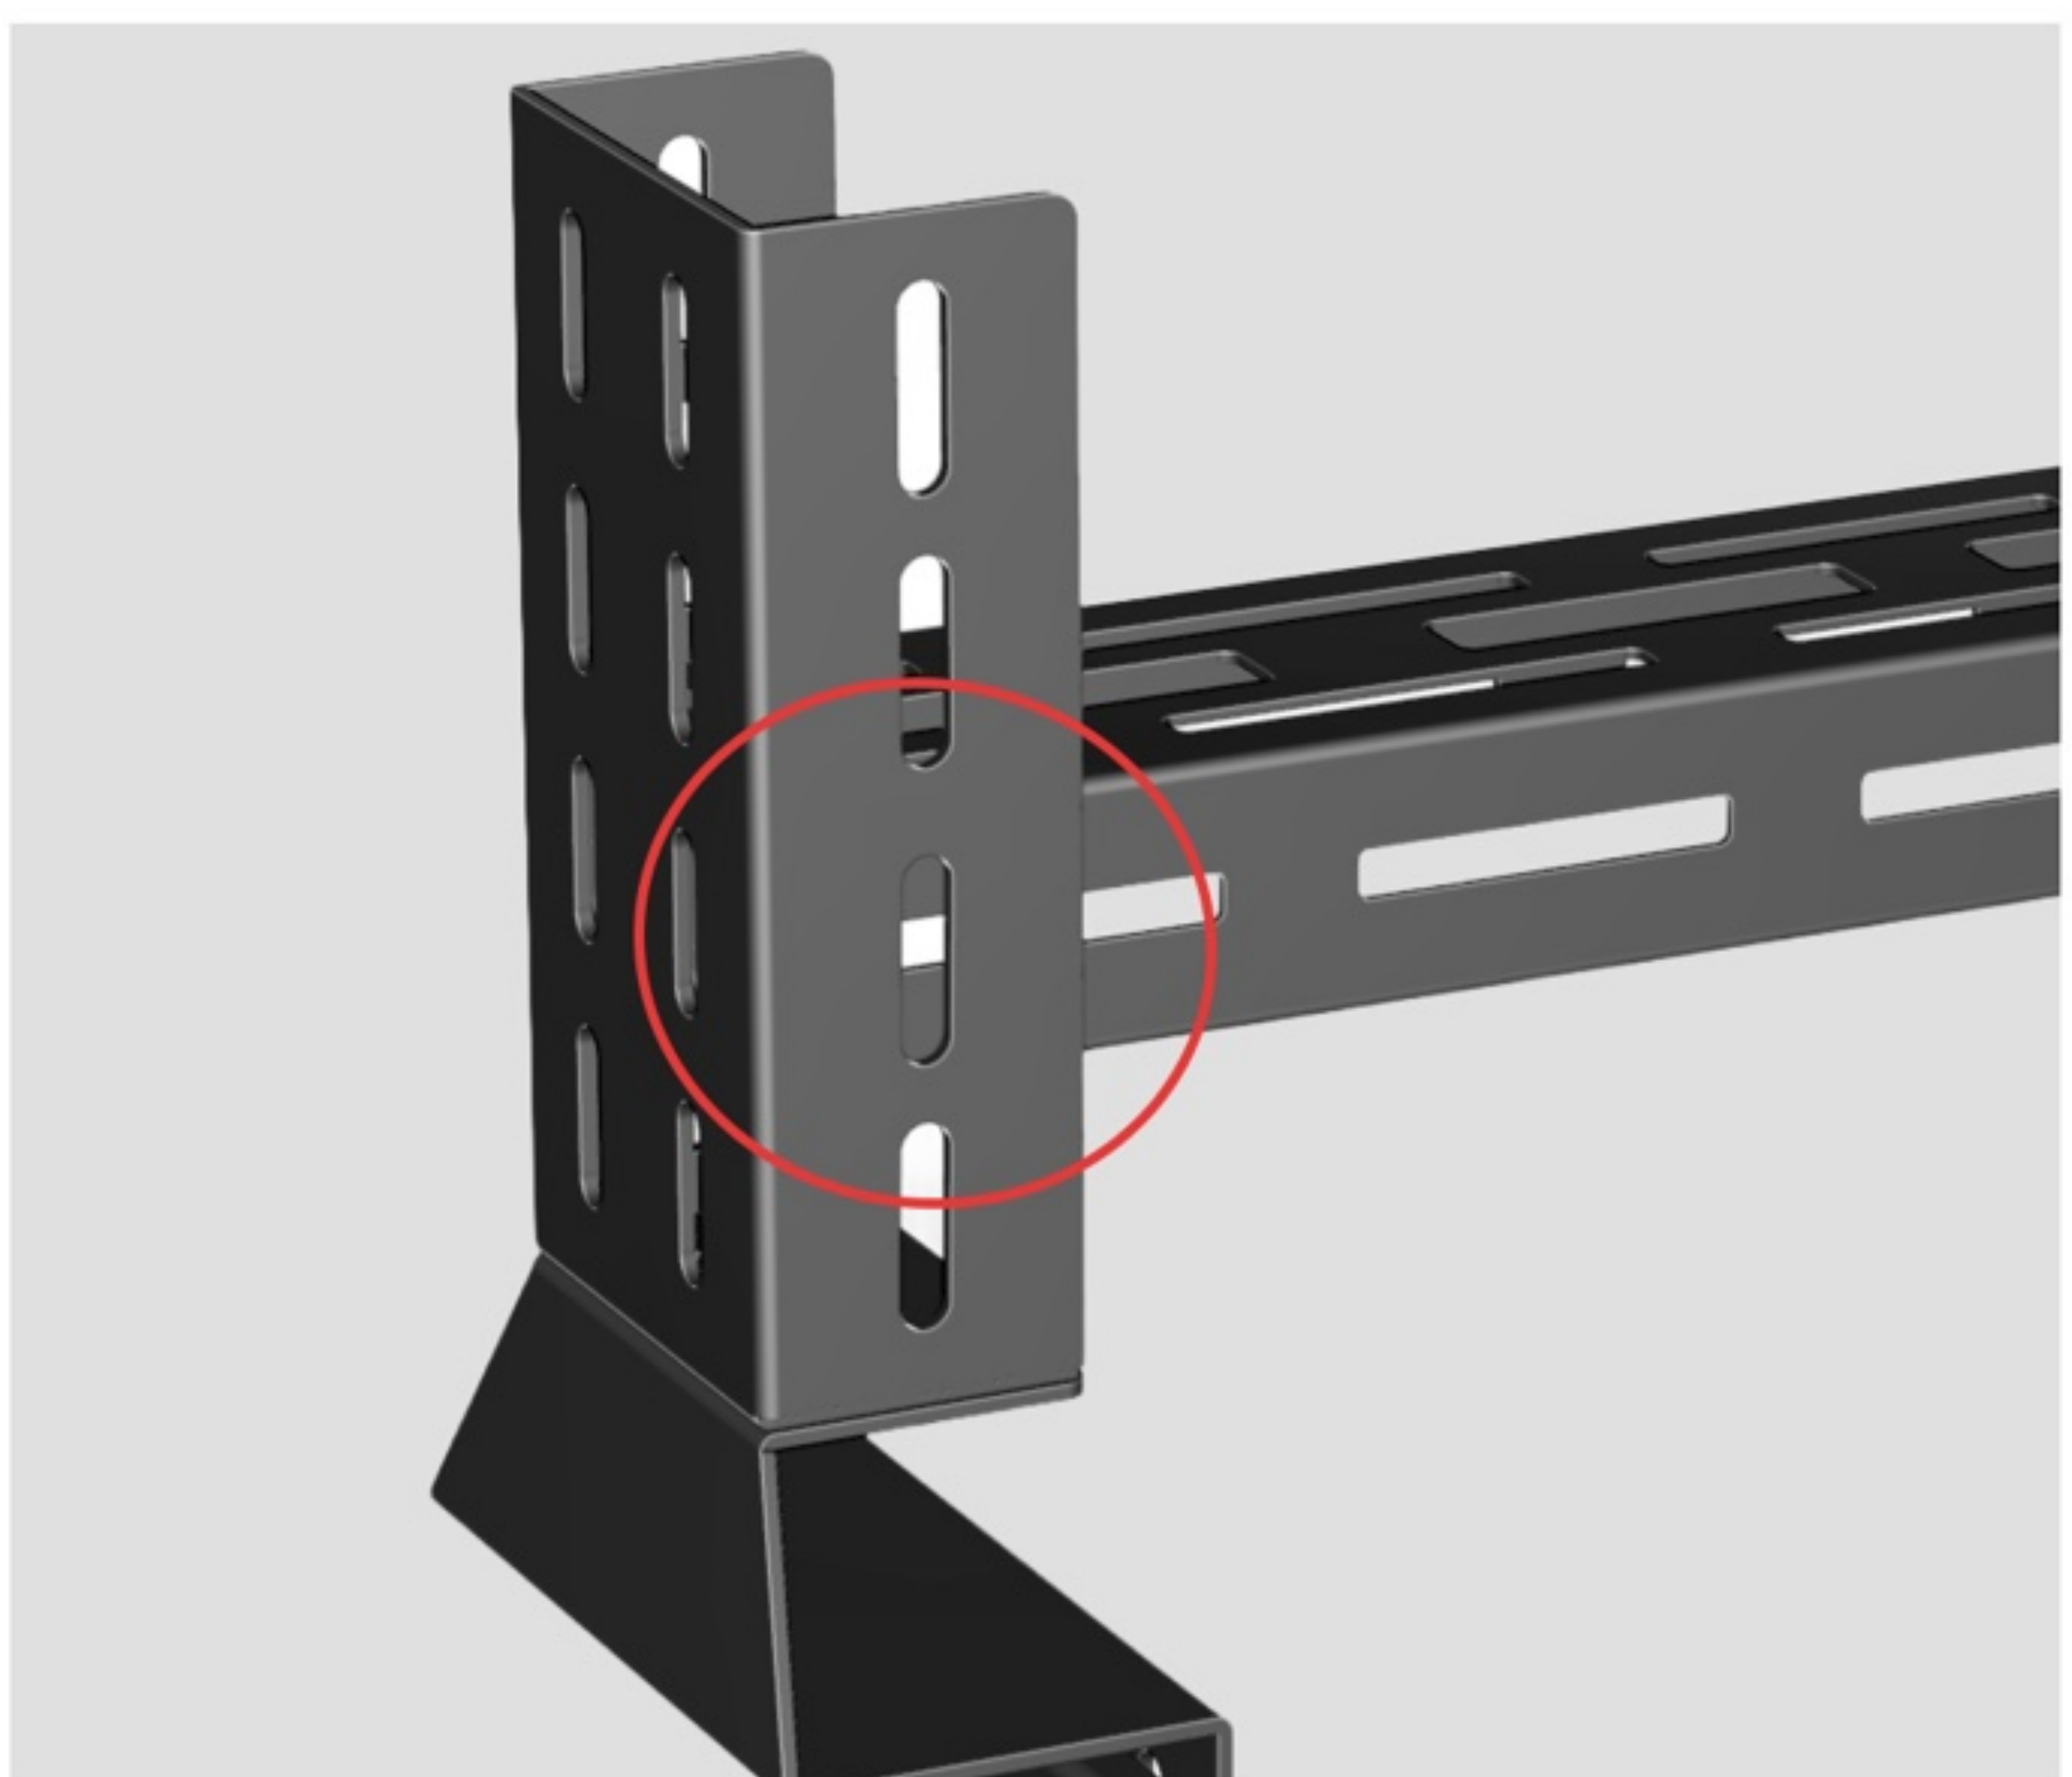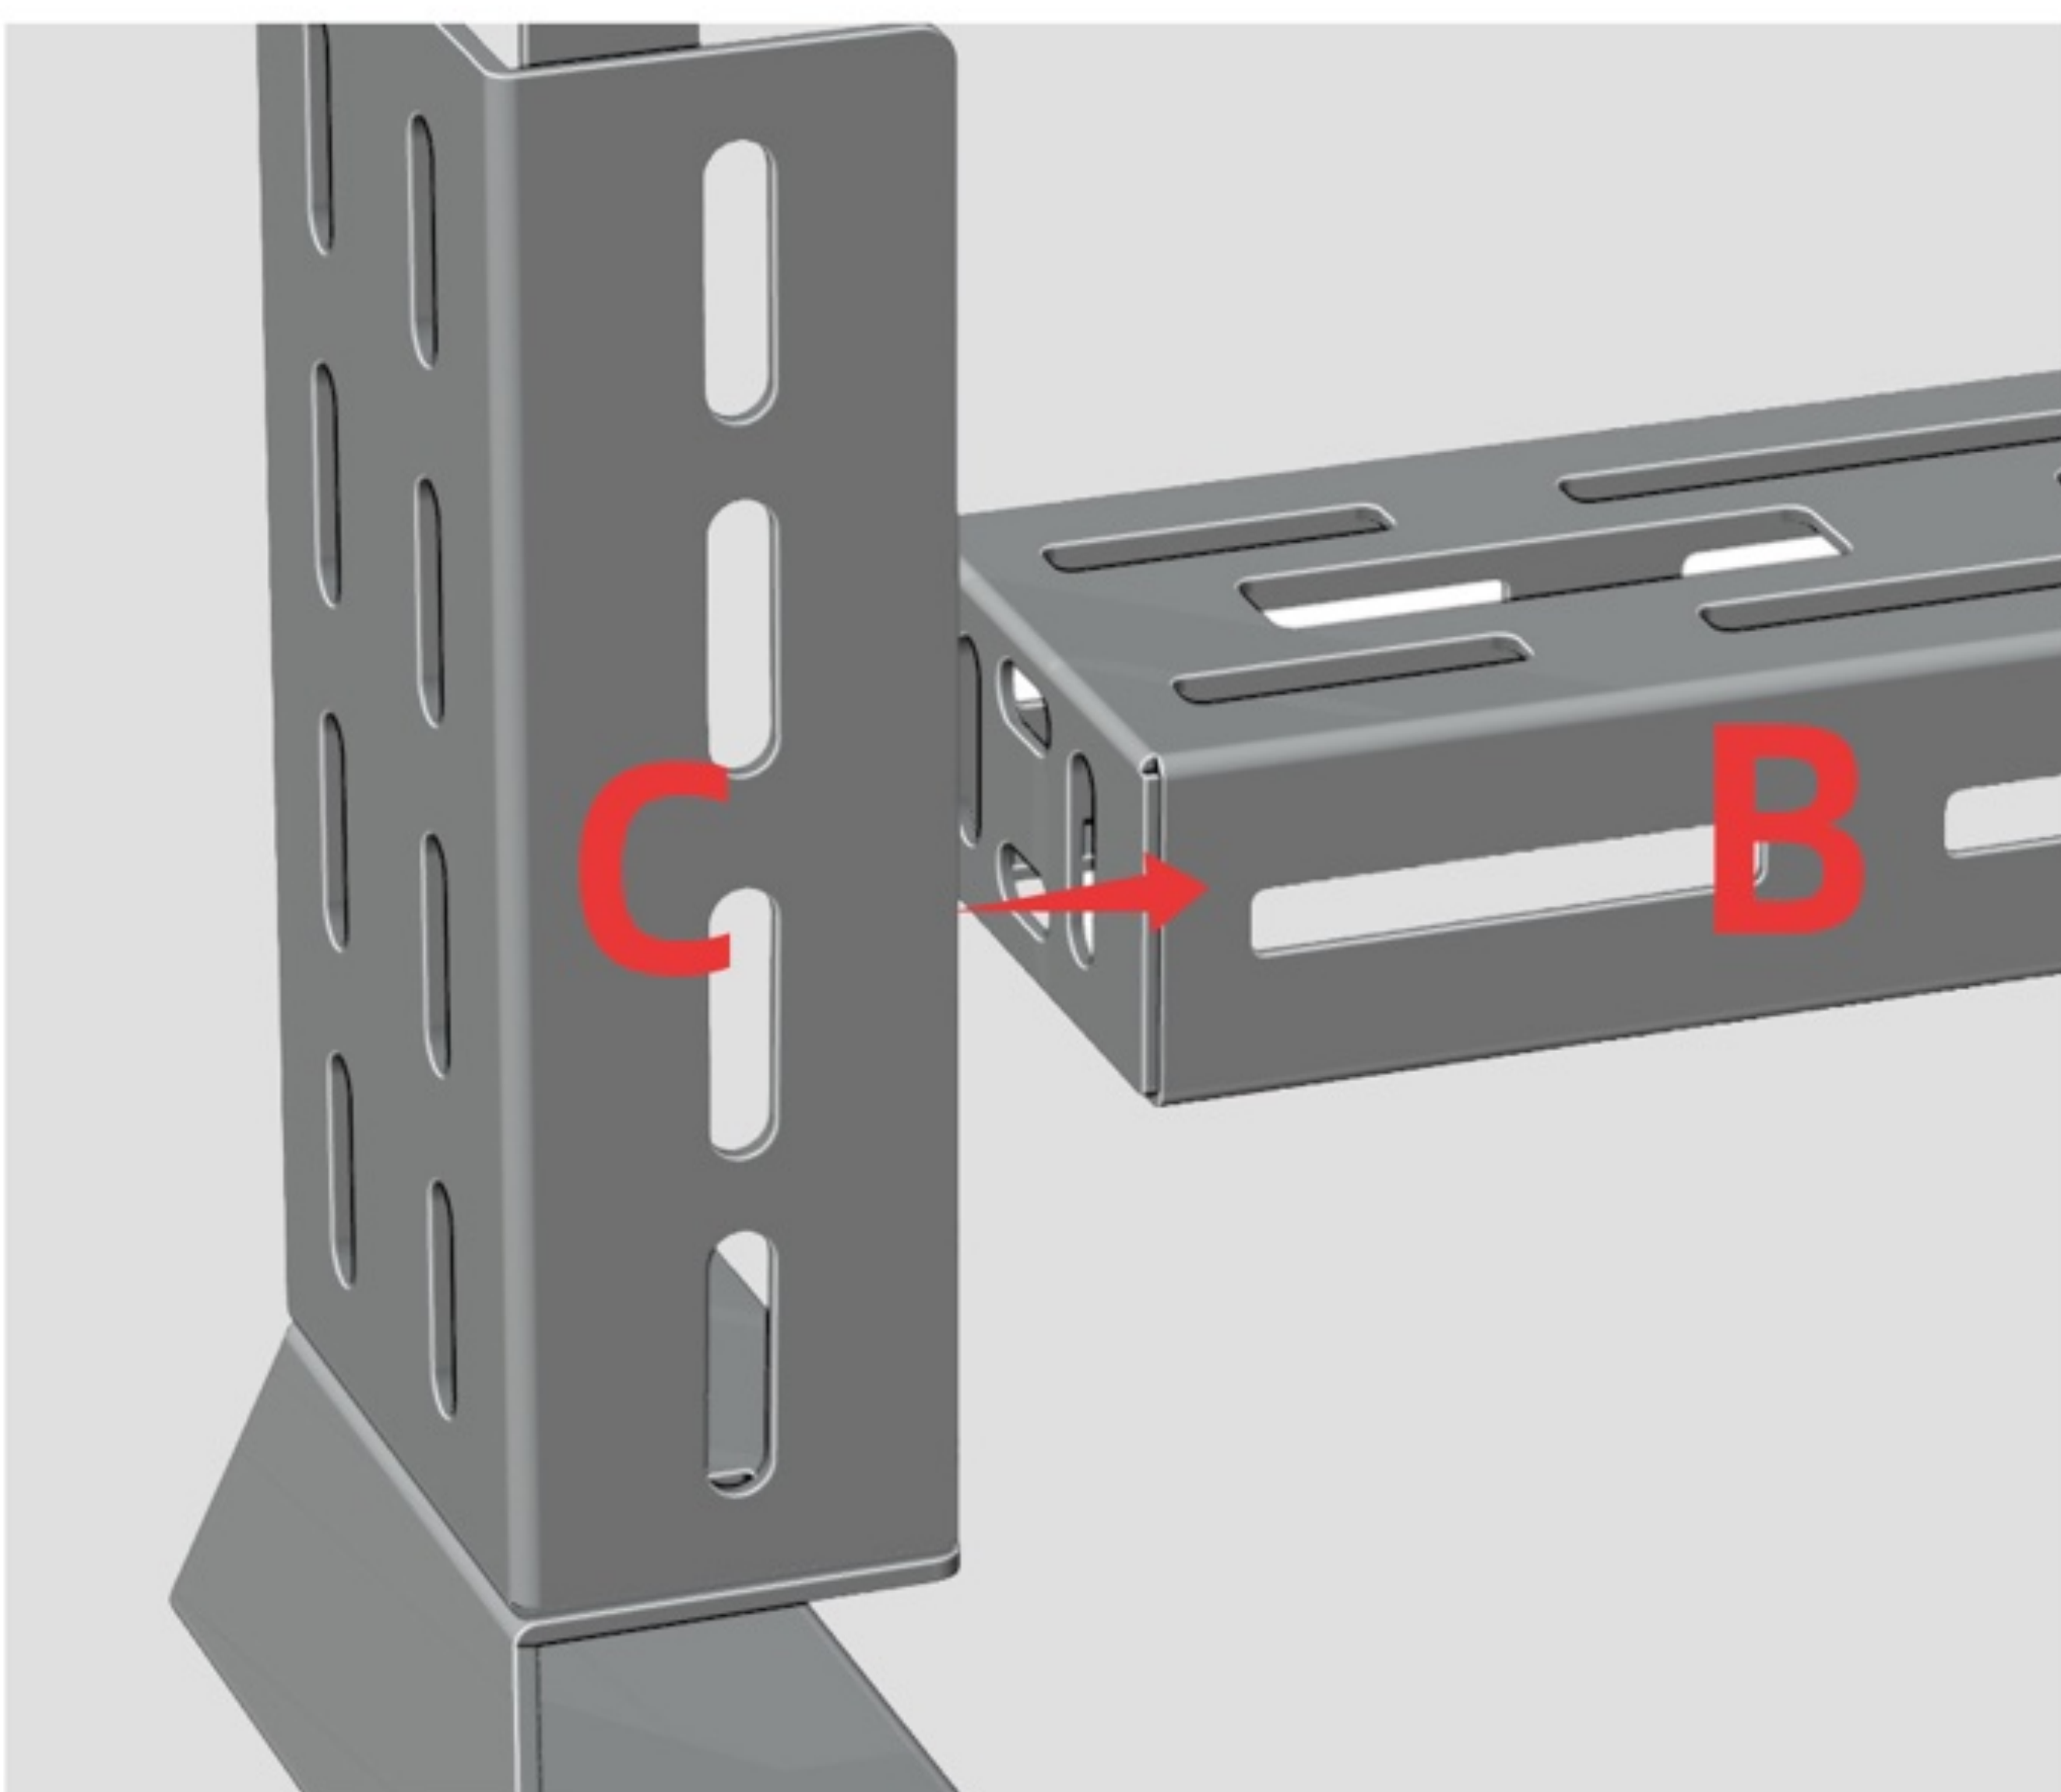

INSTALLATION INSTRUCTIONS


STEP 3 THREE INSTALLATION VARIATIONS (Choose the installation style matching your vehicle model)



① Models With Track:



② Models With Track:

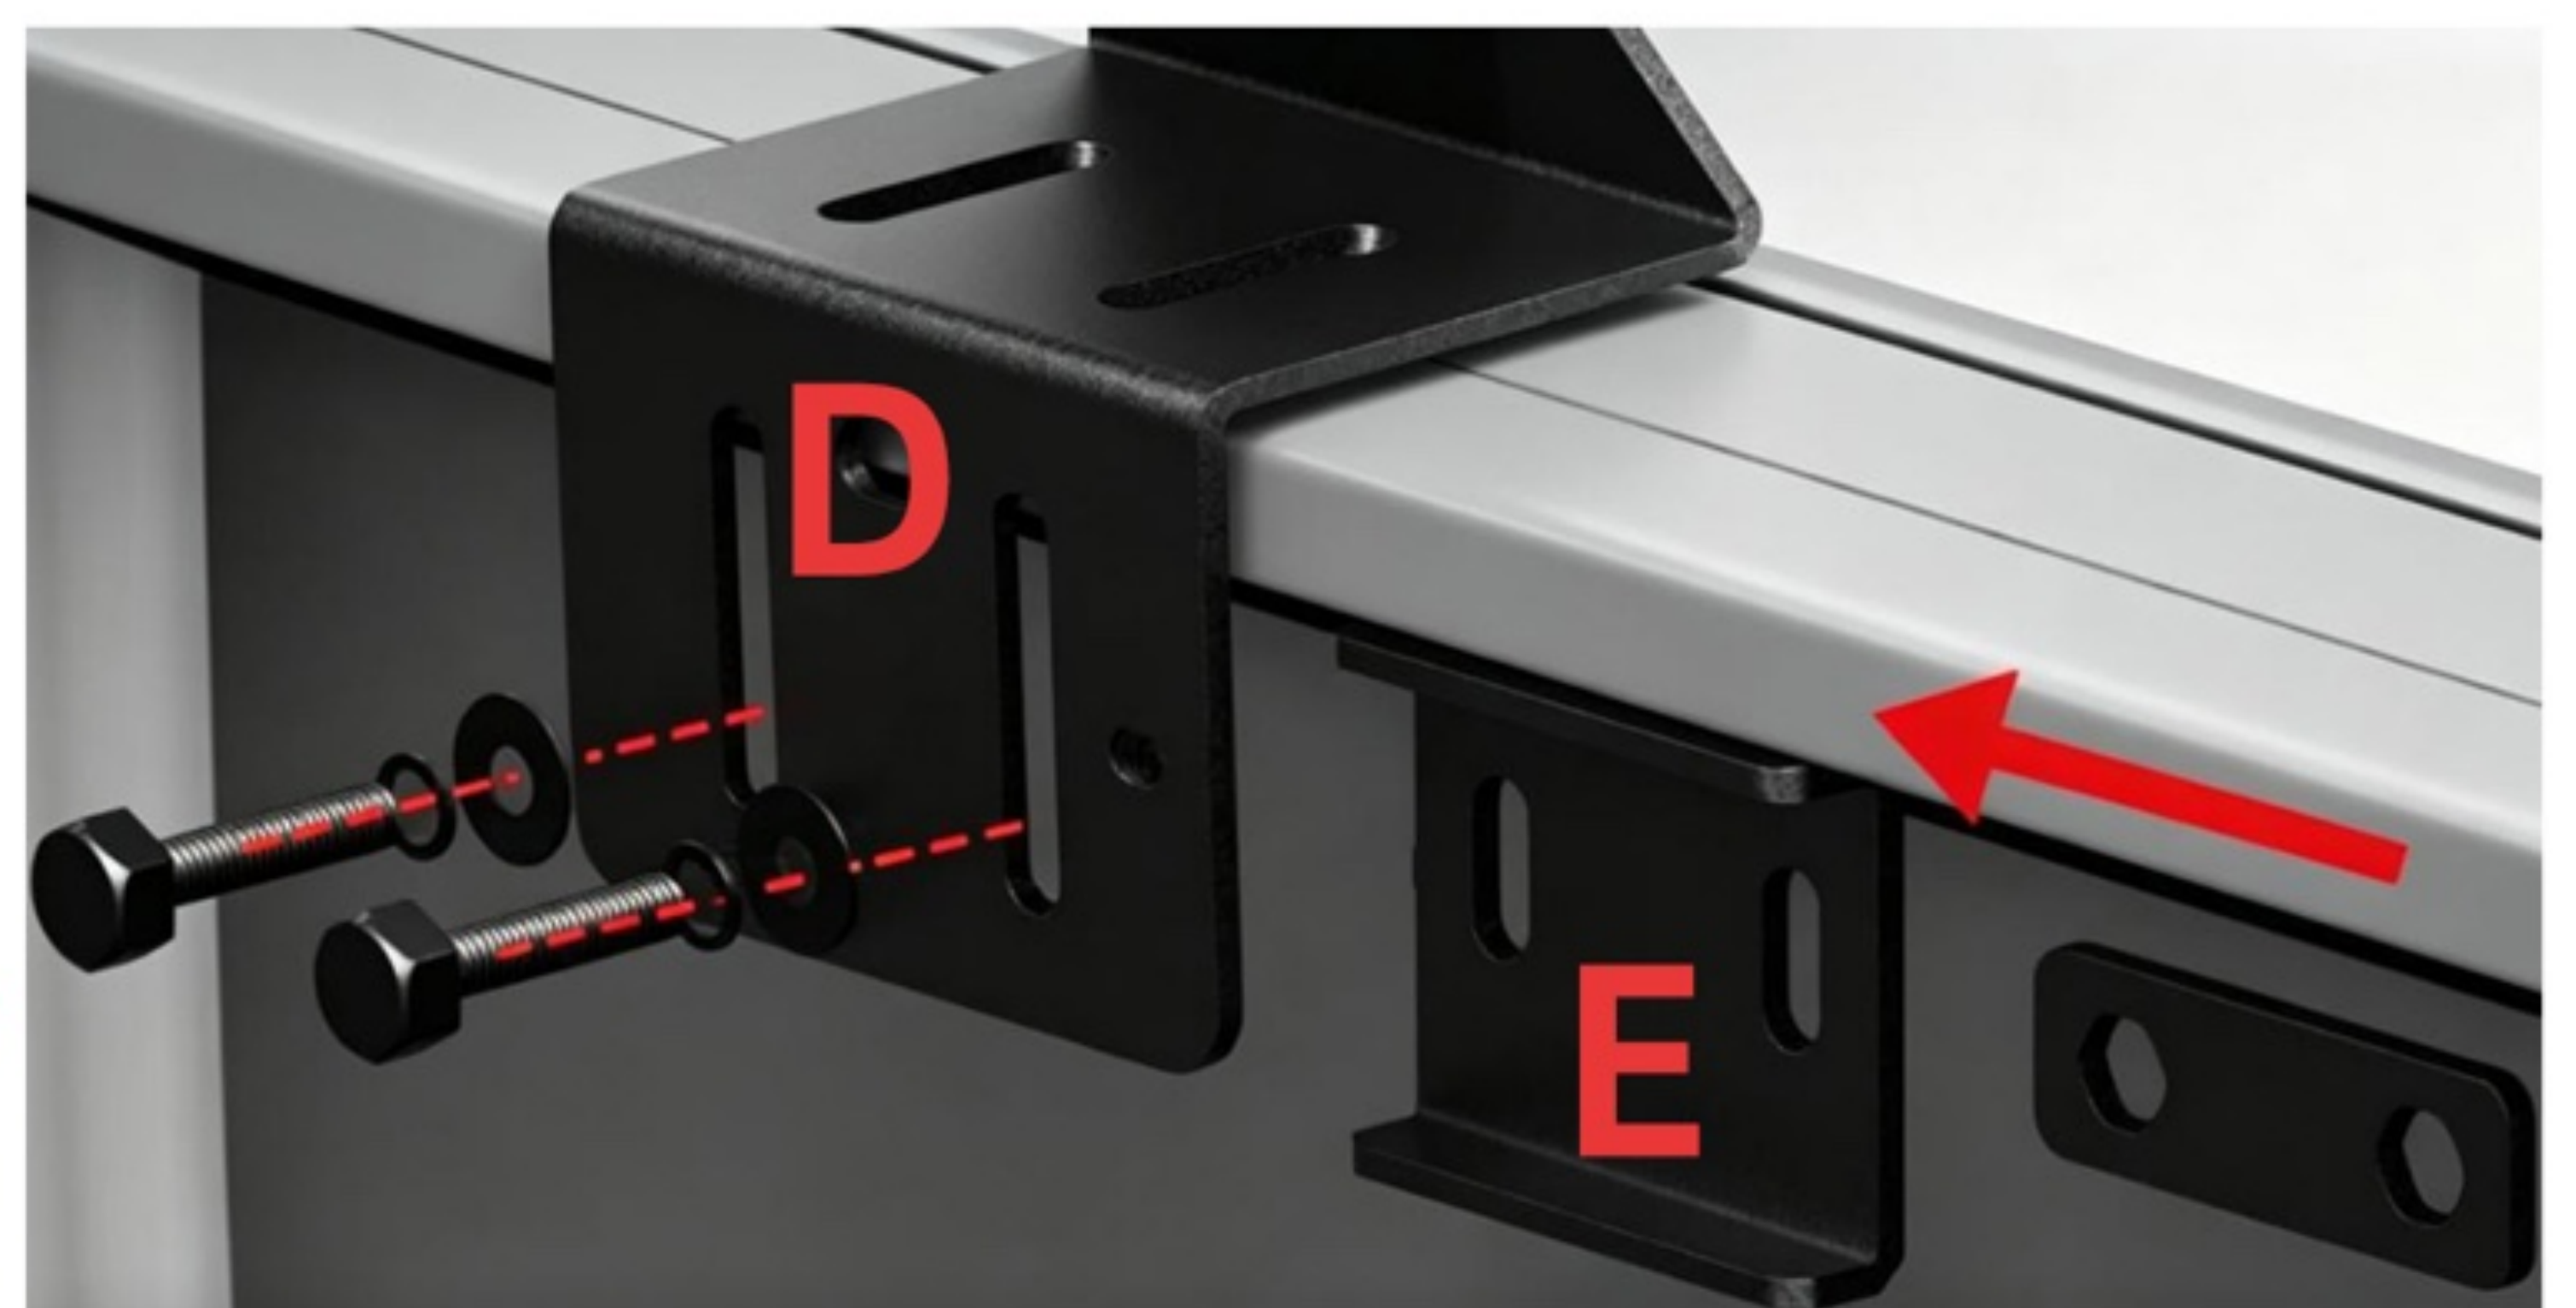

STEP 4 Assemble the Part "A" & "B"

