

INSTALLATION INSTRUCTIONS

TGH.A005

INSTALLATION TIME

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.


CONTENTS



Fender Flares (Left & Right)

Qty	Part Name	Size(mm)	PCS	Qty	Part Name	Size(mm)		PCS
	Fender Flares (Left & Right)		2	K	Flat Washer	M8*16*1		18
H	Hex Bolt	M8*25 	16	L	Split Lock Washer	D8		16
I	Head Self Drilling Sheet		2	M	Flange nut	M8		6
J	Flange Hex Lock Nuts	M8 	8	N	Self-tapping Screw			2

Tools required:

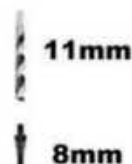

- a. 8mm Wrench;
- b. 13mm Wrench;
- c. Drill with 11mm Drill Bit;
- d. Pneumatic Riveting Nut Gun with 8mm Nut Chuck;

INSTALLATION INSTRUCTIONS


STEP.1

First remove the original fenders in preparation for installing the new ones.



STEP.2

Bend the Part "I" and install it into the car.

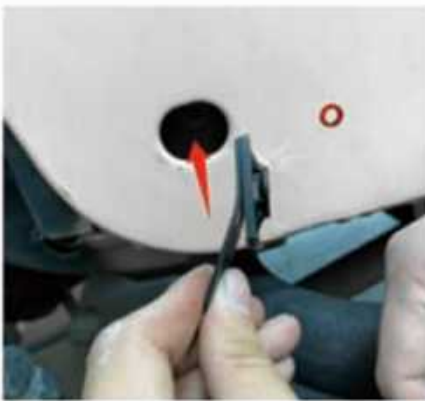

INSTALLATION INSTRUCTIONS

STEP.3

Make four marks with a red pen. Drill four holes with an 11mm drillbit, then use the pneumatic rivet nut fixing kit to place them in the rivetnuts.



INSTALLATION INSTRUCTIONS



STEP.4

Install the fender flares into your car.



INSTALLATION INSTRUCTIONS



INSTALLATION INSTRUCTIONS

Installation is complete and congratulations on this quality product!

