

INSTALLATION INSTRUCTIONS

TGH.B019

PRE-INSTALLATION INSTRUCTIONS

Read this instruction carefully before starting installation. Proper tools will improve the quality of installation and reduce the time if missing parts or any damage found, please take a picture and contact us. Professional installation would be highly recommended. Periodic check to ensure all mounting hardware remains secure and tight required. Before installation, please remove the factory fender liners in preparation for installing our product.

CONTENTS



M8*25	D8	M8*16*1	M8	M8
				
Hex Bolt X28	Split Lock Washer X28	Flat Washer X28	Flange Hex Lock Nuts X14	Rivet Nut X18

Tools required:

- Drive Socket Ratchet Wrench
- 5mm Hex Bit Socket
- Rivet Nut Tool
- 13mm Wrench
- 13mm Shallow Socket
- 9mm Drill Bit*Electric Drill



Hand Rivet Nut Tool
(Package included)

INSTALLATION INSTRUCTIONS

STEP.1 Driver's Side Front Fender Flares Installation:

First, remove the factory fender liners to prepare for the new fender liners installation.



STEP.2 coupling with vehicle

If you have purchased our front fender liners, please follow the steps below to install them:

Since it is not possible to install nuts in the side screw holes, it is necessary to use a hand riveting tool to manually insert rivets in the side mounting locations. The rivet nut tool instruction: Place the nut or insert into the hole, making sure it fits snugly. Place the end of the hand riveting tool over the nut or insert and squeeze the nut or insert with the handle of the tool. This will create even pressure around the nut or insert, holding it firmly in place. Once this is done, a bolt or screw can be threaded into the nut or insert to hold the object firmly in place.

Tools Required: 13mm shallow socket and 13mm wrench.

NOTE: If you find that the hole is too small before riveting, try the following.

(1) If only minor size adjustments are required, the hole may be carefully trimmed to fit the diameter of the selected rivet using a tool such as a sander or metal file. Be careful not to over-trim in case the hole is too large.



(2) Choose a drill bit slightly larger than the current hole diameter and carefully ream the hole using an electric or hand drill. Make sure to operate at a low speed and apply gentle pressure so as not to damage the surrounding material.



INSTALLATION INSTRUCTIONS


STEP.3

First, install the 5 screws into the front screw holes. Lift the fender and align it with the body hole, then install the driver's side front fender: secure it using the M8*25 screws and nuts.

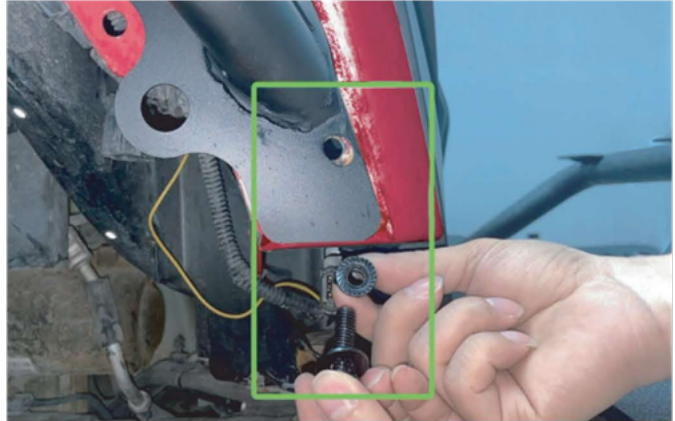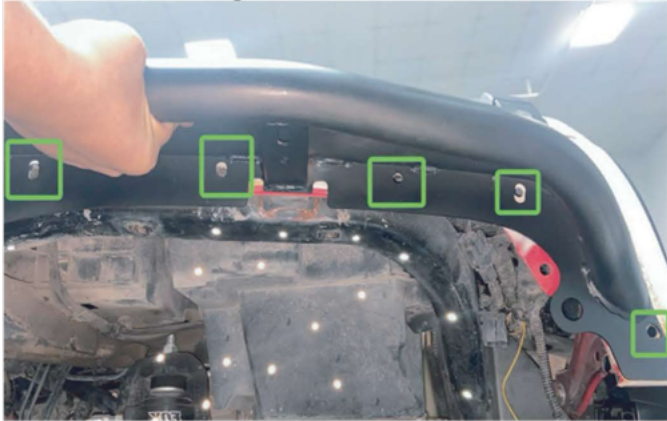

STEP.4

Finally, install each of the two rear mounting holes with M8*25 screws and nuts. After completing the installation, tighten all screws. At this point, the front fender has been completely installed.

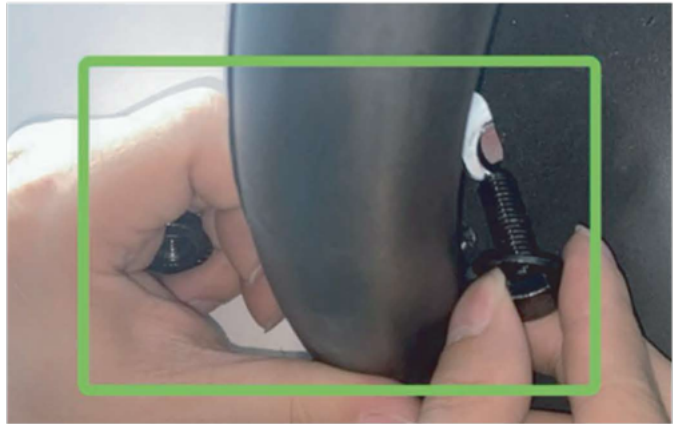

INSTALLATION INSTRUCTIONS

STEP.5 Driver's Side Front Fender Flares Installation:

Before installation, please remove the original fender liner in preparation for the installation of the new fender liner in preparation.



Compare the holes in the body to your vehicle and after locating the appropriate mounting holes refer to the riveting process described in step 2 above. Rivet all holes using the appropriate rivets

NOTE: If you purchased our rear fender liners, you do not need to rivet the top two holes.

STEP.7

Once the riveting is complete following the steps above, next lift the rear fender and secure it with M8*25 screws then just tighten all the screws.



After completing the driver's side install the passenger's side in the same manner.



INSTALLATION INSTRUCTIONS

STEP.8

Installation complete.
Congratulations on receiving your Tokmowin quality product.
Enjoy!

