

INSTALLATION INSTRUCTIONS

TGH.F104

PRE-INSTALLATION INSTRUCTIONS

Read this instruction carefully before starting installation. Proper tools will improve the quality of installation and reduce the time if missing parts or any damage found, please take a picture and contact us. Professional installation would be highly recommended. Periodic check to ensure all mounting hardware remains secure and tight required. Before installation, please remove the factory fender liners in preparation for installing our product.

CONTENTS



No.	Part Description	QTY	Pic.	No.	Part Description	QTY	Pic.
A	Rubber Strip (long)	1		I	Hex Nut M8	36	
B	Rubber Strip (curved)	2		J	Flat Washer M8x16x1	36	
C	Rubber Strip (short)	1		K	Spring Washer M8	16	
D	Rubber Strip (with holes)	5		L	Flat Washer M6x16x1.5	8	
E	Plastic Clips	4		M	Hex Bolt M6x20	8	
H	Hex Bolt M8x20	36		N	Hex Nut M6	8	

TOOLS REQUIRED:

- a. 13mm wrench
- b. 12mm wrench
- c. 5mm socket wrench (5 mm Allen wrench)
- d. 4mm socket wrench (4 mm Allen wrench)



INSTALLATION INSTRUCTIONS

STEP.1

First clean the roof of the prepare all the parts for the roof rack, and then begin the installation.



STEP.2

Install part "E" to the roof of the

NOTE: Do not tighten the bolts in this step.



2x	
L	○
M	⌚
N	○



STEP.3

Attach the corresponding part "B" to the two mounting brackets as shown in the figure below.



2x	
H	⌚
I	○
J	○
K	⦿



INSTALLATION INSTRUCTIONS

STEP.4

Attach the front crossbar (part "A") to the steel structure.



STEP.5

Install the other part "B" to the two mounting brackets and attach to the front crossmember.



STEP.6


Install the crossbars (part D) engraved with numbers 1,2,3, 4 and 5 in sequence.



INSTALLATION INSTRUCTIONS

STEP.7

Install the rear crossmember (part "C") to the steel structure.

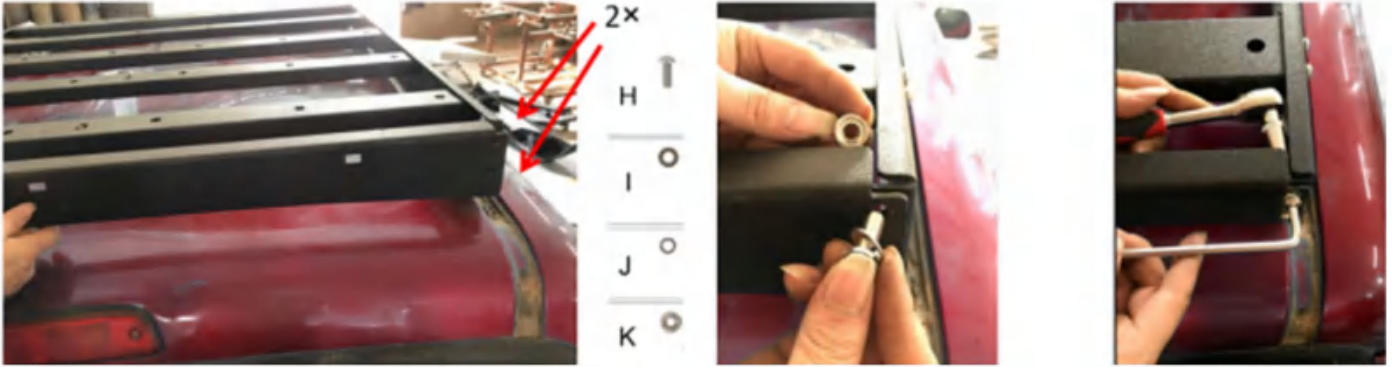

STEP.8

Check and tighten all bolts.



STEP.9

4 LED spotlights on the front crossbar,



STEP.10

Installation complete!
Congratulations on your purchase
of a quality tokmowin product!

