



INSTALLATION INSTRUCTIONS

TGH.H002-9

PLEASE NOTE:

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.


CONTENTS



M12*35	M12*30	D12	12*2*25	M12
				
A(6*)	B(6*)	C(12*)	D(18*)	E(12*)

Driver Side

Passenger Side

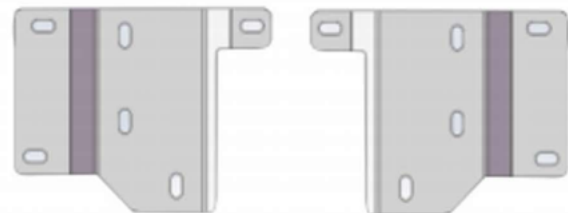

Mounting Brackets

Tools required:

- Drive Socket Ratchet Wrench;
- 10mm, 19mm Wrench;
- 19mm Shallow Socket;
- 4mm Hex Bit Socket;

INSTALLATION INSTRUCTIONS


STEP 1 INSTALL ROLL BAR

First, remove the original car rear bumper radar harness. Use a 10mm wrench to unscrew the screws behind the original car bracket, and then unplug the harness connector.



STEP 2

Next, the mounting brackets need to be mounted on the bumper. Use M12*30 screws to assemble them. Repeat the same procedure on the other side.

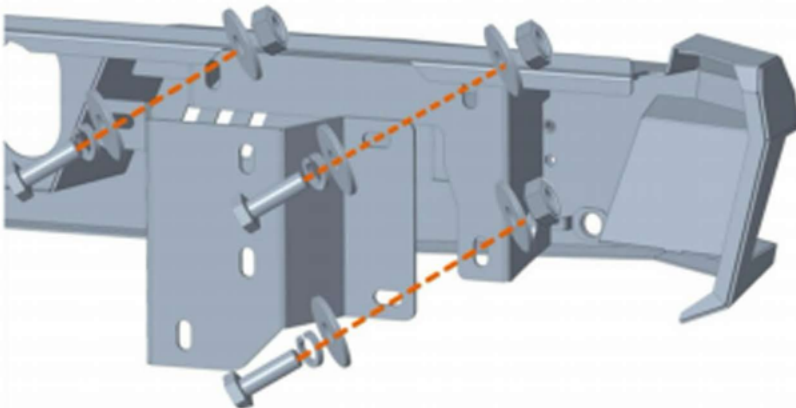

B*6 & C*6 & D*6 & E*6

INSTALLATION INSTRUCTIONS

STEP 3

It is recommended to install the bumper with assistance. Lift the bumper, align it with the original vehicle mounting holes, and secure it using M12*35 screws with washers and nuts. Adjust the gap from the vehicle and tighten the screws



A*6 & C*6 & D*12 & E*6





INSTALLATION INSTRUCTIONS

STEP 4

The installation is complete. We hope you enjoy a wonderful off-road life with this quality product!

