


INSTALLATION INSTRUCTIONS

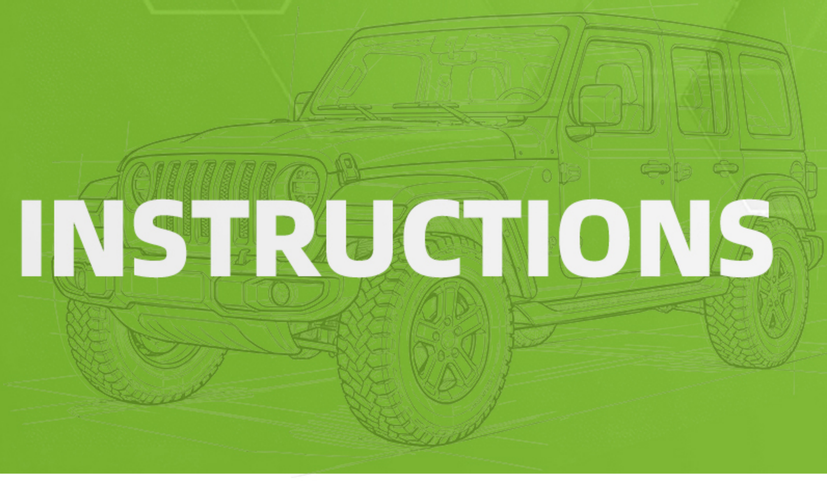

TGH.H003

IMPORTANT

Please read and understand all instructions before starting this installation. The manufacturer holds no responsibility for any personal injury or damage sustained to vehicle during installation or use of this product.

CAUTION: This product is designed primarily to enhance the appearance of this vehicle and in no way will prevent damage to vehicle, personal injury or death in the event of an accident.

CONTENTS

PRE-INSTALLATION INSTRUCTIONS




Read this instrudtion carefully before starting installation.


Proper tools will improve the quality of installation and reduce the time required.


If missing parts or any damage found, please take a picture and contact us. Professional installation would be highly recommended.

Periodic check to ensure all mounting hardware remains secure and tight.

CONTENTS

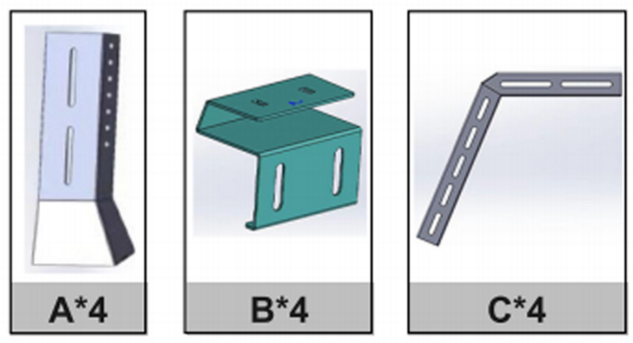

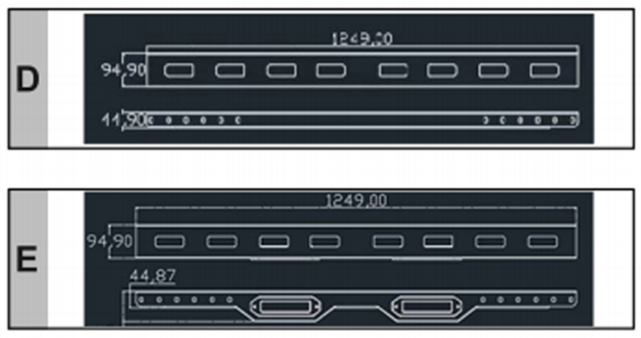

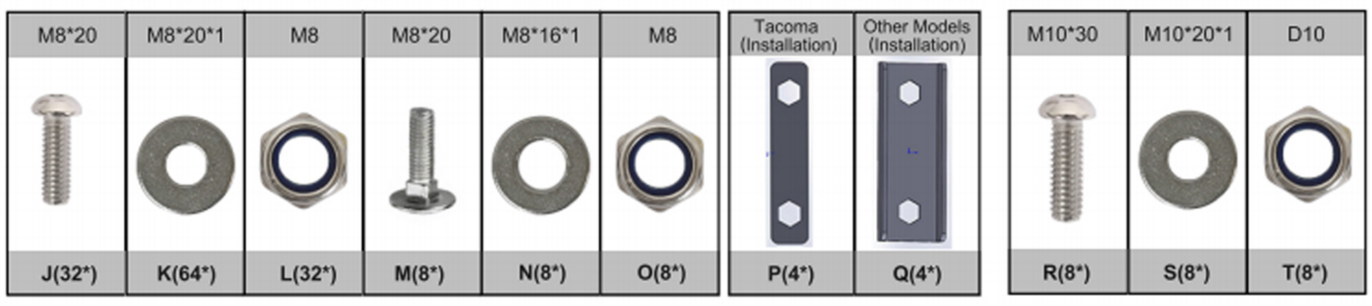


TOOLS REQUIRED

A. 6mm HEX Socket Wrench;





INSTALLATION INSTRUCTIONS

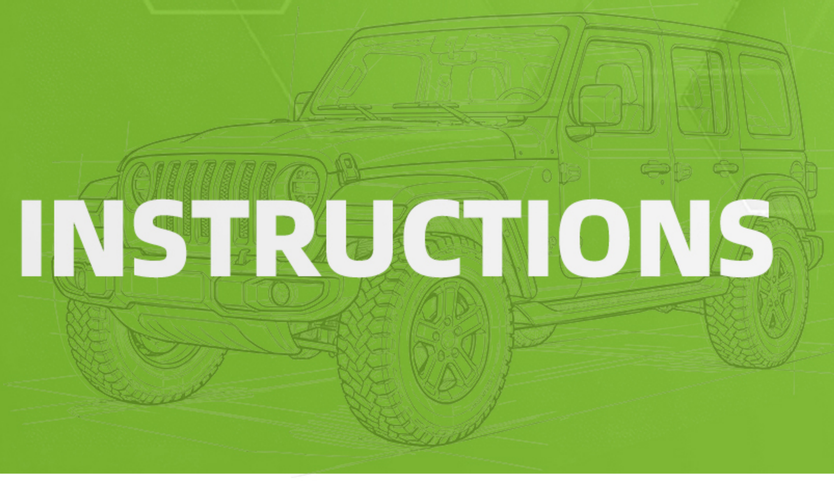

STEP 1


Assemble the Part "A" &"B" *4with those bolts(M, N, O)*8. As the picture show.





STEP 2

Assemble parts "A,B" and "C"*4 using bolts (J,K*2,L).

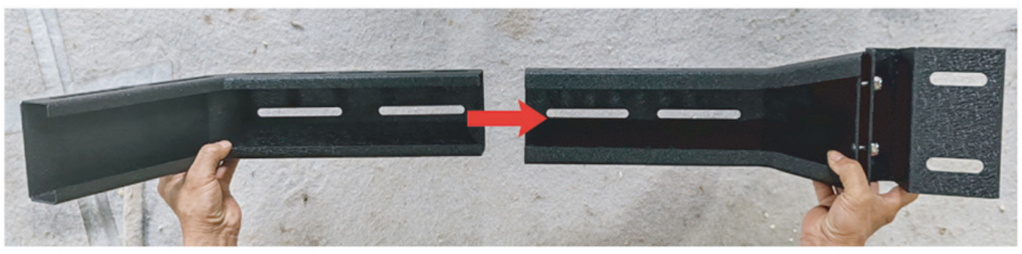





STEP 3

Next, use the bolts (J,K*2,L) to assemble the partsassembled in the second step with "D,E".







STEP 4

Use these bolts (R,S,T) to take the previously assembledparts and use "Q(P)" to assemble the parts to the vehicle.



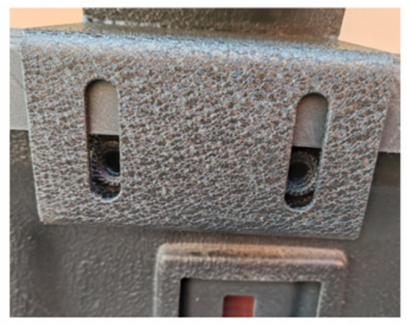



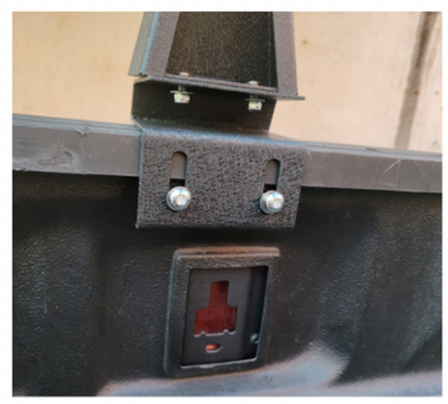

INSTALLATION INSTRUCTIONS

STEP 5

Installation is complete. Thank you for being able to enjoy the-wonderful off-road life with this quality product!

