INSTALLATION INSTRUCTIONS

TGH.H004

IMPORTANT

Please read and understand all instructions before starting this installation. The manufacturer holds no responsibility for any personal injury or damage sustained to vehicle during installation or use of this product.

CAUTION: This product is designed primarily to enhance the appearance of this vehicle and in no way will prevent damage to vehicle, personal injury or death in the event of an accident.

CONTENTS



PRE-INSTALLATION INSTRUCTIONS


Read this instrudtion carefully before starting installation.

Proper tools will improve the quality of installation and reduce the time required.

If missing parts or any damage found, please take a picture and contact us. Professional installation would be highly recommended.


Periodic check to ensure all mounting hardware remains secure and tight.


CONTENTS

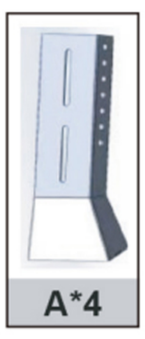

A*4



B*4


C*4

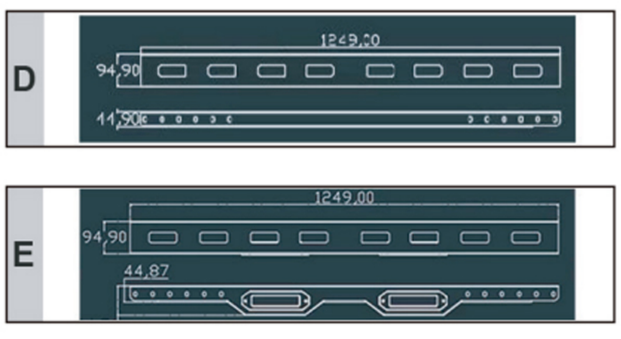

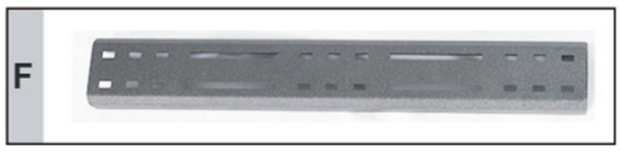
F

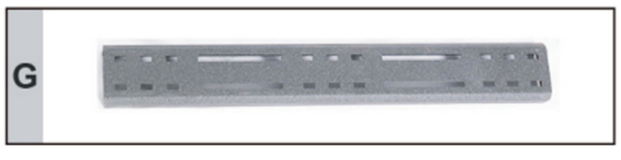
G

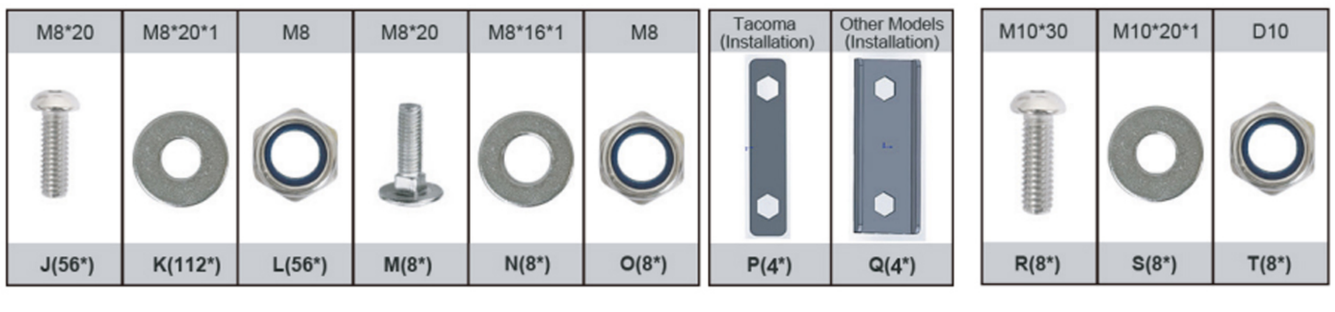

TOOLS REQUIRED

a. 10mm, 13mm Socket


b. 5mm Hex Bit

c. Ratchet

c. Torque Wrench




INSTALLATION INSTRUCTIONS

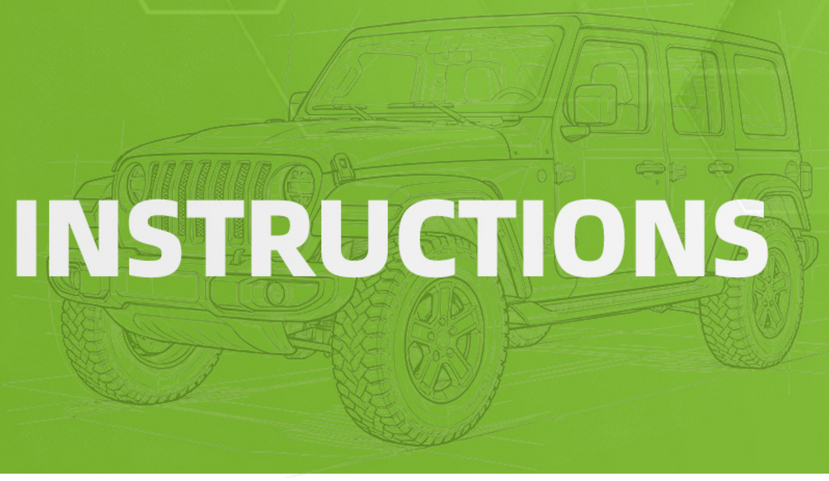

STEP 1


Assemble the Part "A” &"B” *4 with those bolts(M, N, O)*8. As the picture show.

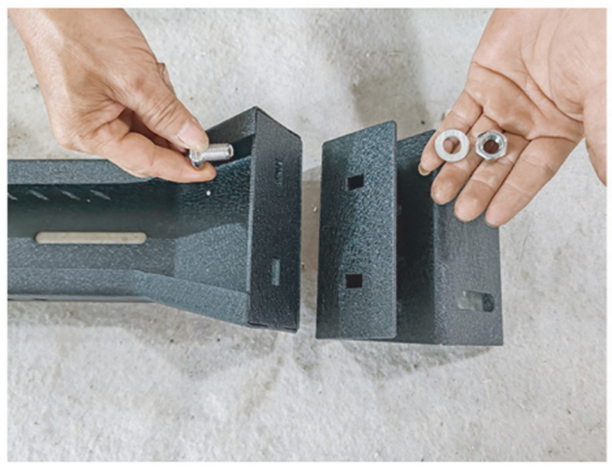



STEP 2

Assemble parts "A,B" and "C"*4 using bolts (J,K*2,L).

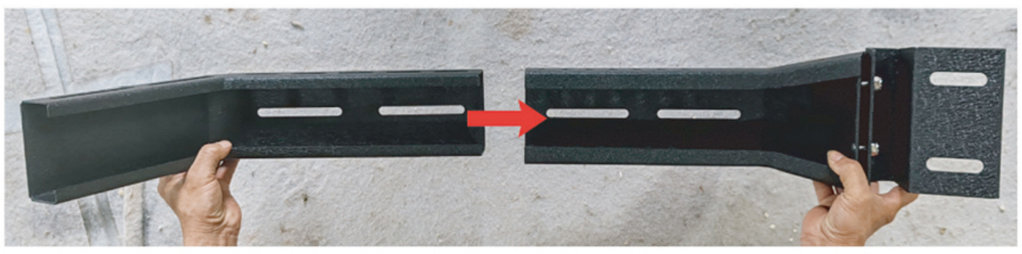





STEP 3


Next, use the bolts (J,K*2,L) to assemble the partsassembled in the second step with "D,E” .






STEP 4


Next, assemble the "F, G" with bolts (J,K*2,L)with the parts from step 3.

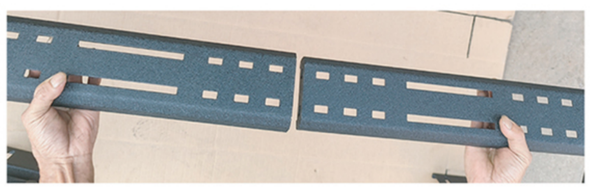



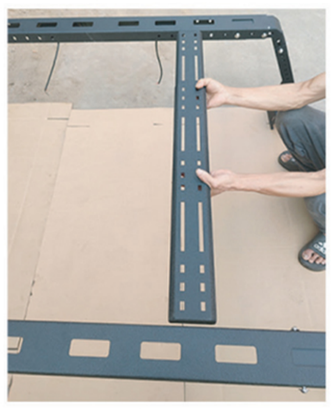



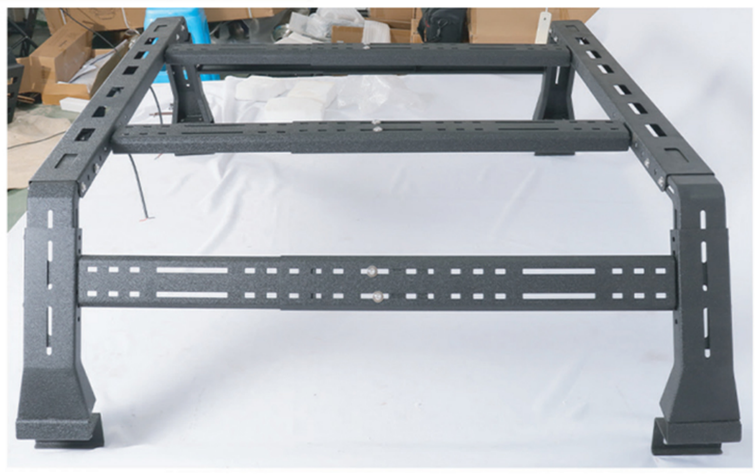


INSTALLATION INSTRUCTIONS


STEP 5

Use these bolts (R,S,T) to take the previously assembled parts and use "Q(P)" to assemble the parts to the vehicle.



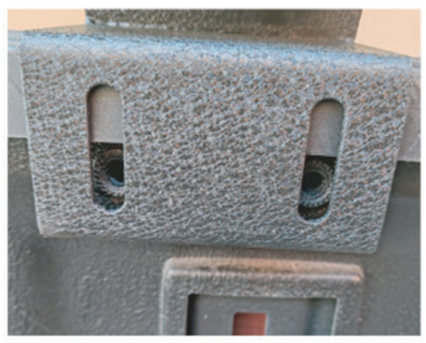



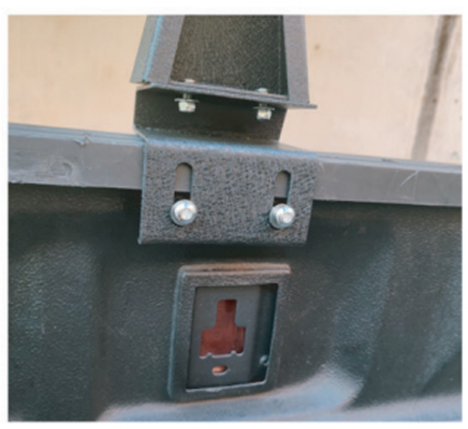

STEP 6

Installation is complete. Thank you for being able to enjoy the-wonderful off-road life with this quality product!

