

INSTALLATION INSTRUCTIONS

TGH.WG039-9

INSTALLATION TIME

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.



Part Name	Qty	Part Name	Qty	Part Name	Qty
Front tube	x2	Side panels	x2	Middle tube - front	x1
M12 nut piece	x4	base	x2	Middle tube - rear	x1
Upper connector (front)	x2	Side nets	x1	M8 threaded plate	x8
Rear tube	x2	Roof	x2	Red plate	x2
Upper Connecting (Rear)	x2	Side plate connecting piece - rear		Upper transverse plate	x1
T-Block	x4	Clamp Block	x4		

TOOLS REQUIRED:

- A. Wrench
- B. Ratchet
- C. Sockets
- D. Power Drill
- E. 5/16" Drill Bit



INSTALLATION TIME:

About 2 hours, 2-3 people may be needed. Installation time may differ according to your mechanical skill level.

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTION

Step 1:

Assemble the Part with those bolts. As the picture show.




Step 2:

Attach the Base Bracket to the bottom of the tubes with (2) 12mm Flat Head Bolts. Do NOT tighten at this time. Repeat this STEP to install the Driver side.




Step 3:

Select the passenger/right side trim panel. Attach the plate to the side bracket with the nut.

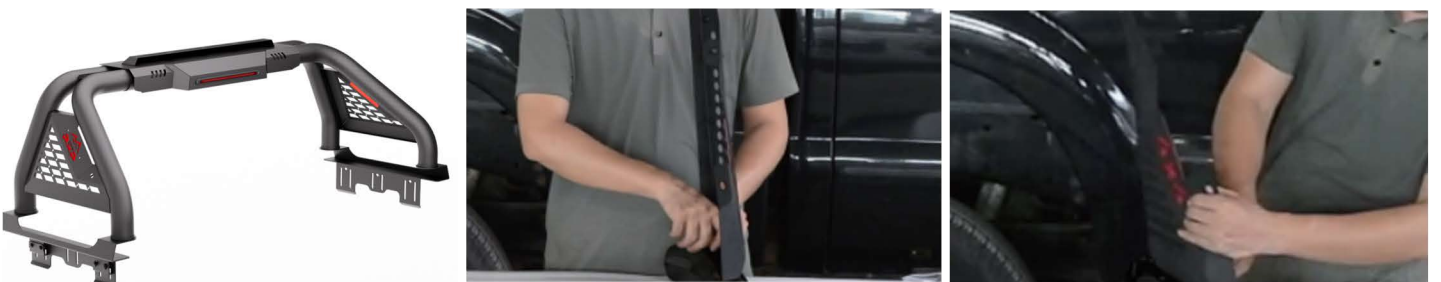

Step 4:

No Drilling Method: Use T-Block or R-Clamp Block accessories depending on your truck bed rails, then tighten the screws.

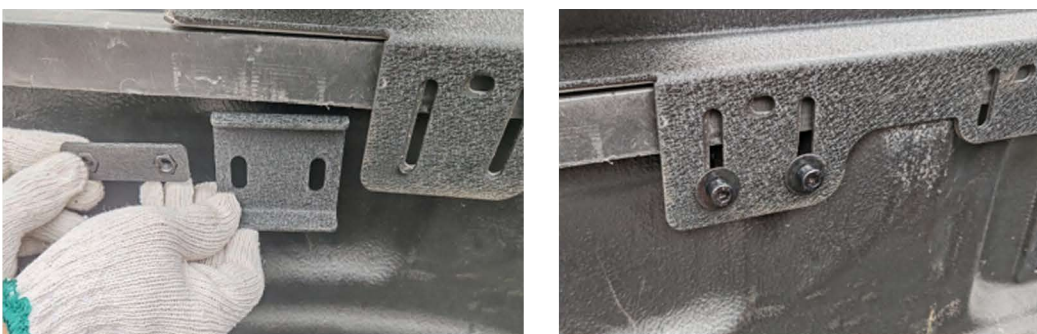

INSTALLATION INSTRUCTIONS

Step 5:

Drilling Installation: Attach Sports Bar assembly to the bed with (3) 8mm x 40mm Hex Bolts, (3) 8mm Lock Nuts, (3) 8mm Flat Washers and (3) 8mm Nut Plates. Tighten all hardware at this time.



Step 6: installation is done. Looking forward to enjoying the wonderful off-road life!

