

INSTALLATION INSTRUCTIONS

TGH.WG045

PLEASE NOTE:

Please read and understand the instructions before installation! Our manufacturer is not responsible for any personal injury or damage to your vehicle that occurs during the installation or use of this product.

NOTE: This product is intended to be used primarily for decorative purposes and should not be relied upon in any way to protect your safety.

CONTENTS



No.	Name	QTY
A	Right support tube	1
B	Left Support Tube	1
C	Front cross tube	1
D	Rear cross tube	1
E	Center Top Plate	1
F	Chassis	4

INSTALLATION INSTRUCTIONS

No.	Part Description	Specification	QTY	Pic.
a	Flat Head Rivet Nut	M10	8	
b	Hexagon Head Bolt	M10×30	8	
c	Plain Washer	φ10×25×2	8	
d	Spring Washer	φ10	8	
e	Flat Head Rivet Nut	M10	19	
f	Hexagon Head Bolt	M8×20	19	
g	Plain Washer	φ8×20×2	19	
h	Spring Washer	φ8	19	

BEFORE INSTALLATION


Read this instruction carefully before Start Installation. Proper tools will improve the quality of installation and reduce the time required. If missing parts or any damage found please take a picture and contact us. Professional installation would be highly recommended. Periodic check to ensure all mounting hardware remains secure and tight

INSTALLATION INSTRUCTIONS

STEP 1 INSTALL ROLL BAR

Follow the instructions below to install the roll bar using supplied hardware.

Do not tighten the hardware, you will need to adjust the width of roll bar on later instal.

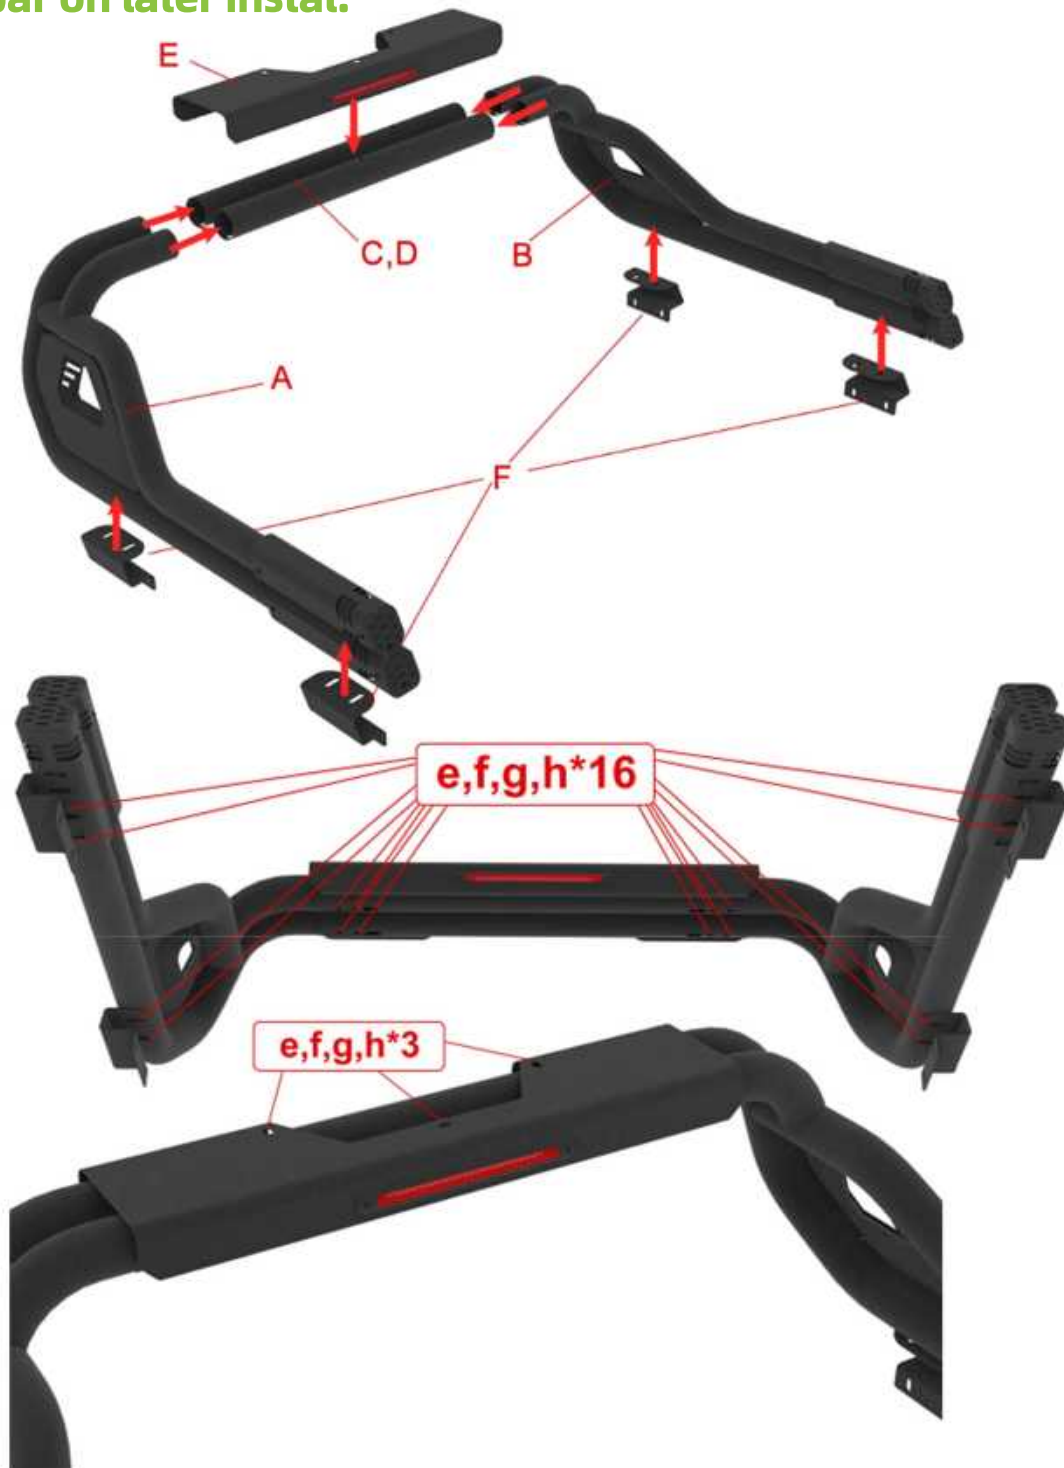

Congratulations, you have completed the assembly of the roll bar

INSTALLATION INSTRUCTIONS

STEP 2 INSTALL ON THE TRUCK BED



Adjust the position of the roll bar to fit perfectly with the bed. Then tighten all hardware.



Congratulations Your installation has been completed

