

INSTALLATION INSTRUCTIONS

TGH.WG058


PLEASE NOTE:

This product is only for auxiliary foot pedal use. Do not use it for towing, hoisting or heavy-duty work. Overload may cause breakage or falling off, leading to severe safety risks. Install only on vehicles with an undamaged, rust-free standard 2-inch trailer hitch. Park on level ground, pull the handbrake and turn off the engine before installation; use tire shims if needed.

CONTENTS



A

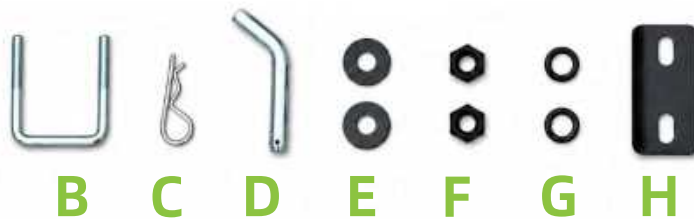

B

C

D

E

F

G

H

No.	Name	QTY	Pic.
A	Foot Pedal Body	1	
B	U-bolt	1	
C	Cotter Pin	1	
D	L-Pin	1	
E	Flat Washer	2	
F	Hex Nut	2	
G	Rubber/Nylon Washer	2	
H	Mounting Bracket	1	

INSTALLATION INSTRUCTIONS

STEP 1 INSTALLA ROLL BAR

1. Push the foot pedal insert rod fully into the trailer's square opening, aligning it with the pin hole;



Step 2. Insert the L-pin and secure it with a cotter pin to prevent it from falling off;



INSTALLATION INSTRUCTIONS

Step 3. Use U-bolts, brackets, washers, and nuts for additional fixation, tightening them to prevent wobbling;



Step 4. After installation, be sure to check for stability. Only use the vehicle after a foot test shows no abnormalities.

