

INSTALLATION INSTRUCTIONS

TGH.WG078

COMPATIBLE WITH: PICKUP TRUCK BED EXTENDER

PARTS LIST:

IF ACCESSORIES ARE MISSING, PLEASE CONTACT
CUSTOMER SERVICE.



# BED EXTENDER				
	SIDE WING CLAMPS X2	CENTER CLAMP X2	GUARDRAIL X6	CENTER GUARDRAIL X3
# A01				
	RUBBER PAD X4	RUBBER PAD X4	HOOK STRAP X1	SHORT FASTENING STRAP X2
# A02				
	BUTTON HEAD BOLT X2	BUTTON HEAD BOLT X4	LONG HEX SOCKET COUPLING NUT X2	HEX NUT X4
# A03				
	HEX SOCKET SELF-DRILLING SCREW X10	CLEVIS PIN X2	ZINC BASE X2	TPE PLASTIC PILLAR X6
# A04				
	BUTTON HEAD BOLT X8	HEX NUT X8	HEX SOCKET SELF-DRILLING SCREW X4	D-RING X2
# A04				
	HEX SOCKET BIT	ALLEN KEY		

INSTALLATION INSTRUCTIONS

ASSEMBLY PRODUCT

STEP 01:

FIRST ASSEMBLE THE PRODUCT, THEN PROCEED WITH THE INSTALLATION. GOOD TOOLS CAN MAKE THE JOB EASIER AND MORE EFFICIENT

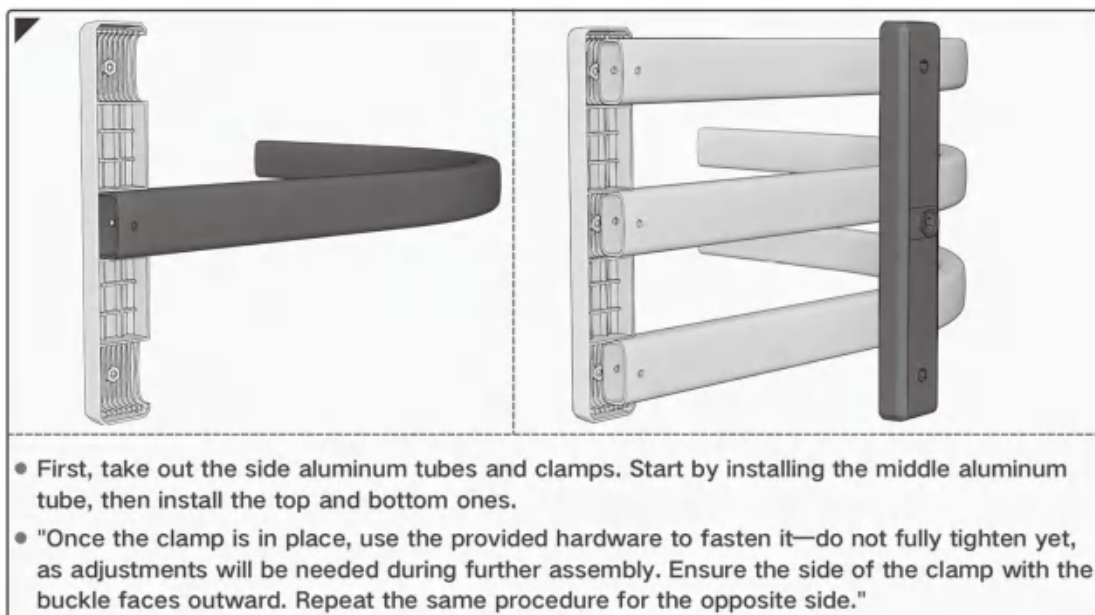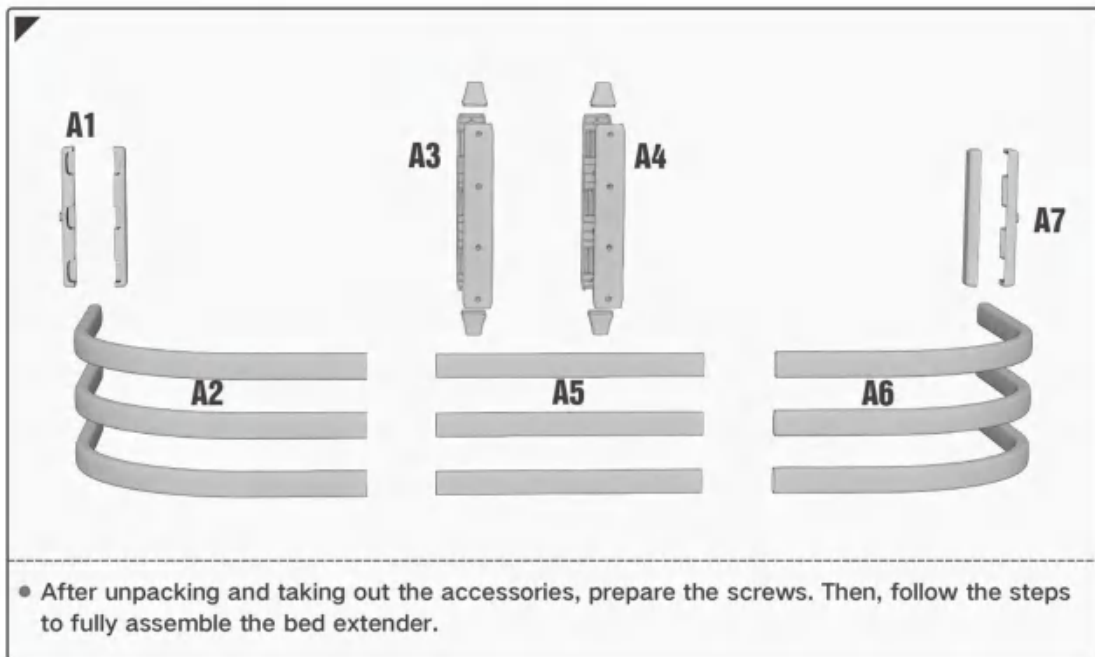

A01



M6*50

BUTTON HEAD BOLT X2



M6*40

BUTTON HEAD BOLT X4



M6

LONG HEX SOCKET
COUPLING NUT X2



M6

HEX NUT X4

INSTALLATION INSTRUCTIONS


ASSEMBLY PRODUCT

STEP 02:

FIRST ASSEMBLE THE PRODUCT, THEN PROCEED WITH THE INSTALLATION.
GOOD TOOLS CAN MAKE THE JOB EASIER AND MORE EFFICIENT



- Insert the straight tube into the middle of the side wing tube. Then, hook the short strap onto the position marked with an arrow. Repeat this step on the other side. Make sure to adjust the distance between the two aluminum tubes to facilitate the next installation step.

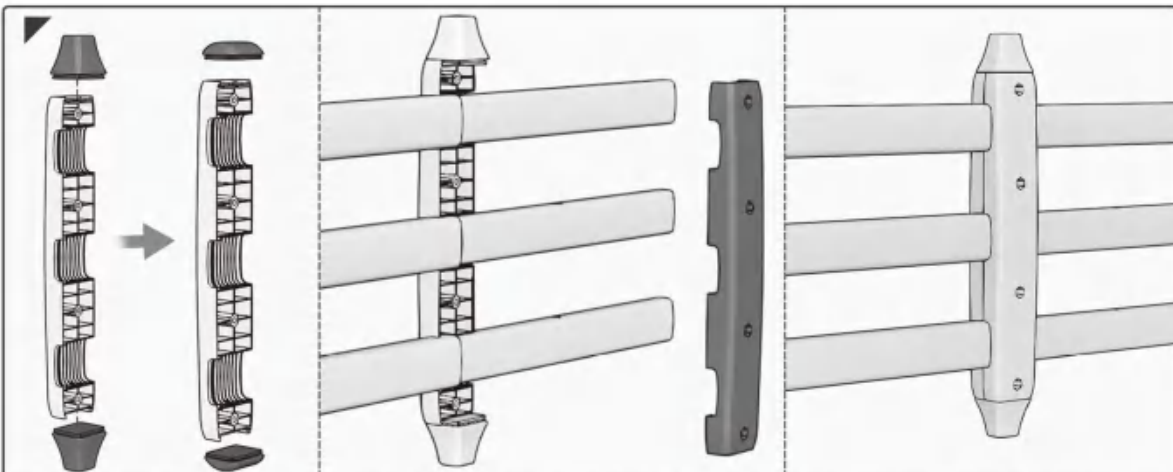

- First, based on the available space in the vehicle, use either the long or short rubber pad to assemble with the center clamp. Then, insert the clamp into the aluminum tube, tighten it, and secure it using the provided screws. Repeat this process on the other side.

A03



M6*20

BUTTON HEAD BOLT X8



M6


HEX NUT X8

INSTALLATION INSTRUCTIONS

HOW TO INSTALL THE PRODUCT

STEP 01:

BEFORE STARTING THE INSTALLATION, PREPARE THE NECESSARY POWER TOOLS TO ENSURE A MORE EFFICIENT PROCESS.

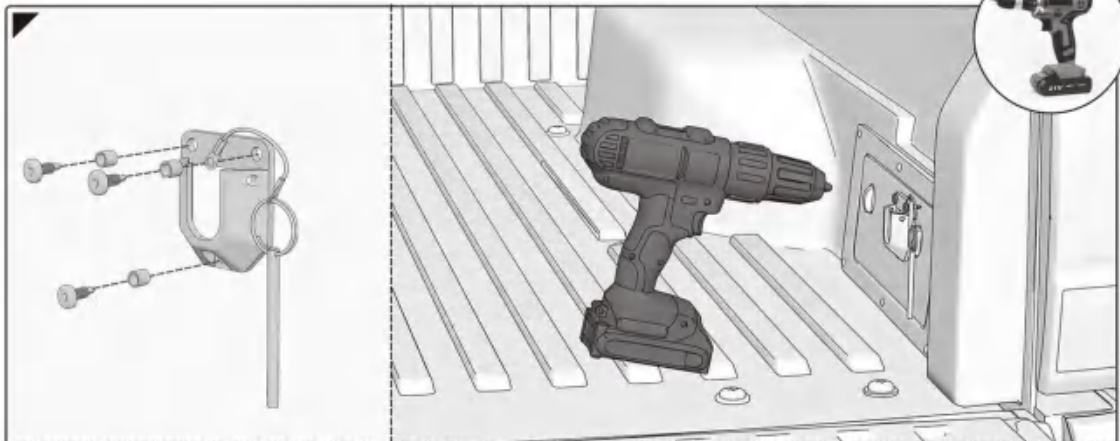

- First, assemble the provided zinc base, nylon tube, self-drilling screw, and locking pin. Repeat the same process on the other side.
- Place the extension frame on the vehicle and mark the drilling positions on both sides. Then, attach the provided bit to your power tool and drill the required holes for the zinc base.

A02




- Before installation, check whether the screws on the extension frame are securely fastened and whether the clamps on both sides are correctly installed. Then, align the extension frame with the holes on the zinc bases and assemble.

INSTALLATION INSTRUCTIONS


HOW TO INSTALL THE PRODUCT

STEP 02:

BEFORE STARTING THE INSTALLATION, PREPARE THE NECESSARY POWER TOOLS TO ENSURE A MORE EFFICIENT PROCESS.

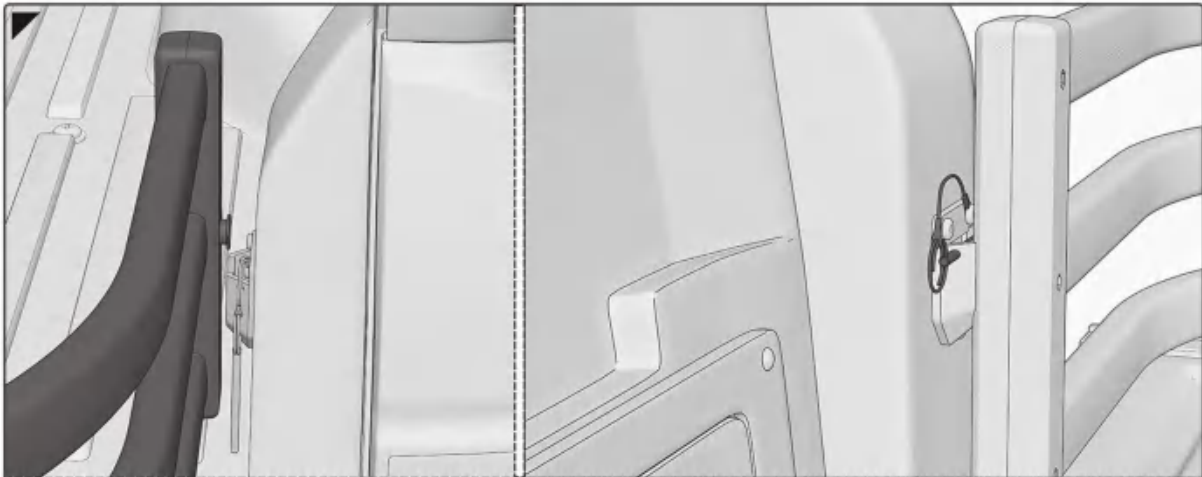

- Insert the extension frame into the latch slot of the zinc base, then insert the locking pin into the zinc base to secure it. Repeat the same process on the other side.

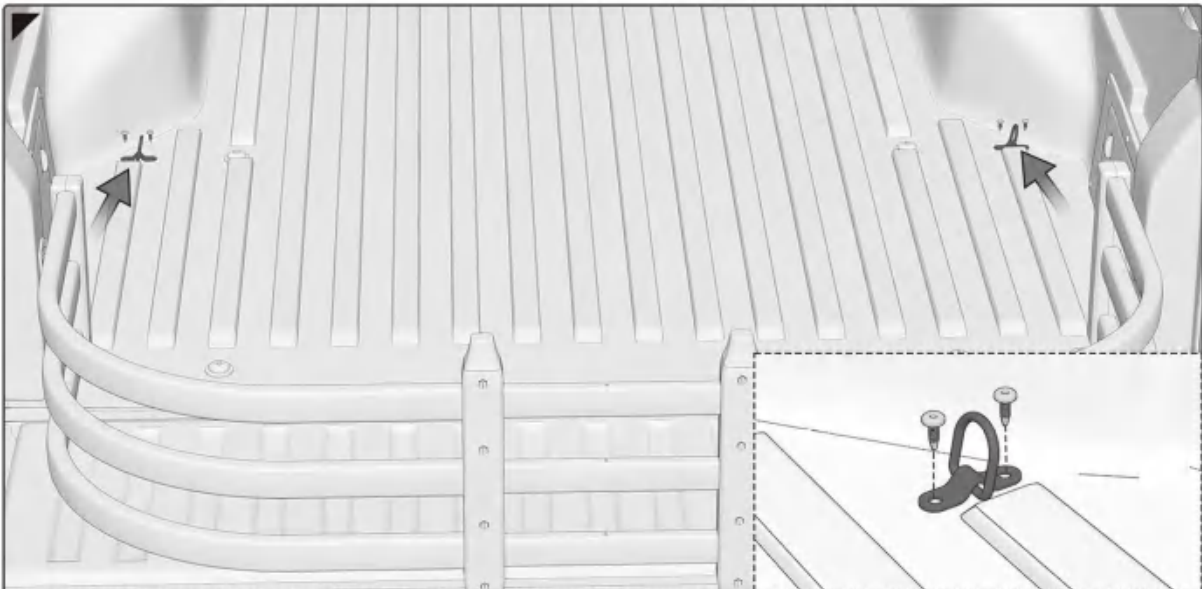

- Finally, install the U-shaped bracket inside the vehicle bed to store the extension frame. Note that this step also requires drilling.

A03



M4.8*19

HEX SOCKET
SELF-DRILLING SCREW X4




D-RING X2

INSTALLATION INSTRUCTIONS

HOW TO INSTALL THE PRODUCT

STEP 03:

BEFORE STARTING THE INSTALLATION, PREPARE THE NECESSARY POWER TOOLS TO ENSURE A MORE EFFICIENT PROCESS.

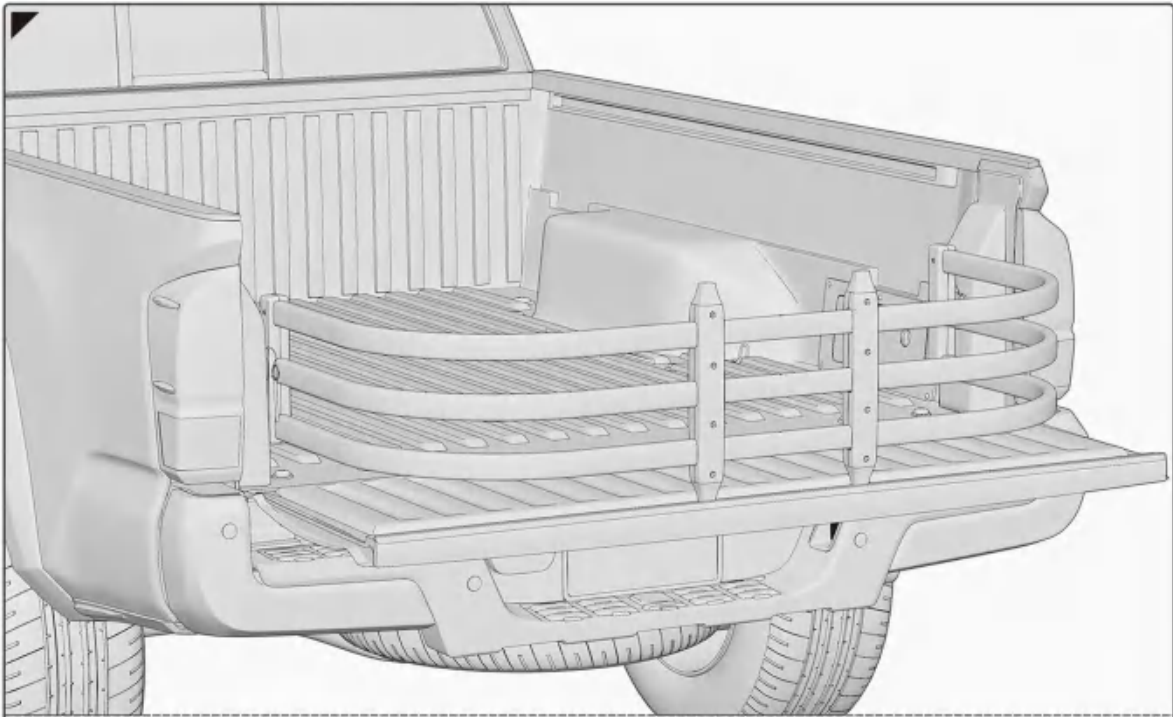

- Congratulations! You have successfully installed the extension frame. Please regularly check all components connected to the vehicle for any looseness to ensure safe use.

