INSTALLATION INSTRUCTIONS

TGH.2642

ATTENTION

Check before installation

- Verify all parts are present before assembly
- Read all instructions carefully before starting
- Do not over-torque the fasteners
- Keep the left and right sides symmetrical

PLEASE NOTE:

1. Check the package

Confirm that every component and hardware item matches the parts and hardware lists.

2. Prepare the vehicle

Park on a level surface, engage the parking brake, and support the vehicle safely before installation.

3. Installation and wiring

All structural fasteners must be tightened after alignment. Brake-light wiring should be completed by a qualified professional.



INSTALLATION INSTRUCTIONS

FIGURE 1 | PARTS LIST

ITEM	PART NAME	MATERIAL / FINISH	PART IMAGE	QUANTITY
A	Middle Main Body	Textured Black		1 PC
B	Textured Black	Sand Black		1 PC
C	Pront Main Tube	Sand Black		1 Lett 1 Right
D	Rext Main Tube	Sand Black		1 Lett 1 Right
E	Sicle Plale	Sand Blace		1 Lett 1 Right
F	Bate Light	Blate Light		1 PC
G	Font Foot Bracket	Zinc Plated		1 Lett 1 Right
N	Rear Foot Bracket	Zinc Plaed		1 Lett 1 Right
I	Front/ Rear Tube Connector Rubler Steve	PP		2 PCS
J	Gress Tube Rutber Ring	PP		2 PCS
K	Sidding Main Body	Sand Blacd		4 PCS
L	Lower Bart Plate	Sand Black		4 PCS
M	Flat Rubber Ring	Silcone		2 PCS
N	Aggiel Rubber Ring	Zinc Plated		3 PCS
O	Instullation Tools Set	Zinc Plaied		3 PCS
	4-LED Pod Light			2 PCS

INSTALLATION INSTRUCTIONS

FIGURE 2 | HARDWARE LIST

A | Brake Light Installation

	PART NAME	IMAGE	MODEL	QTY.
1	Button Head Socket Screw		M4*12	2
2	Lock Nut		M4	2

Use the hardware group for the matching assembly

B | Front / Rear Tube Connection

	PART NAME	IMAGE	MODEL	QTY.
1	Socket Head Cap Screw		M10*35	2
2	Flat Washer		M10*20*1.5	2
3	Spring Washer		Dia. 10	2

Use the hardware group for the matching assembly

C | Mounting Base

	PART NAME	IMAGE	MODEL	QTY.
1	Countersunk Socket Head Screw		M10*35	4
2	Flat Washer		M10*25*2	4
3	Spring Washer		Dia. 10	4

Use the hardware group for the matching assembly

D | Vehicle Installation

	PART NAME	IMAGE	MODEL	QTY.
1	Hex Head Bolt		M8*35	8
2	Flat Washer		M8*25*2	8
3	Spring Washer		M8	8

Use the hardware group for the matching assembly

E | Top Plate / Side Plate / Cross Tube

	PART NAME	IMAGE	MODEL	QTY.
1	Button Head Socket Screw		M8*25	16
2	Flat Washer		M8*20*1.5	16
3	Spring Washer		M8	16

Use the hardware group for the matching assembly

F | Installation Tools

	PART NAME	IMAGE	MODEL	QTY.
1	Allen Key		S=5	1
2	Allen Key		S=6	1
3	Allen Key		S=8	1

Use the hardware group for the matching assembly

INSTALLATION NOTE

Use the supplied washers and spring washers in every bolted joint.
Tighten evenly after all components are aligned.

INSTALLATION INSTRUCTIONS

INSTALLATION STEPS

TGH.2642

STEP 01



Assemble the front and rear main tubes with the rubber sleeves and rings.

STEP 02



STEP 03



STEP 04

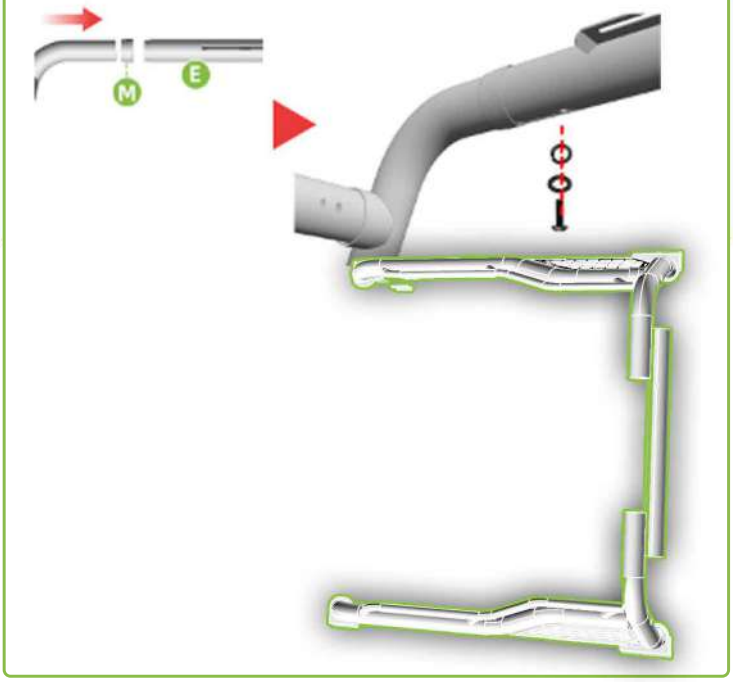

STEP 05

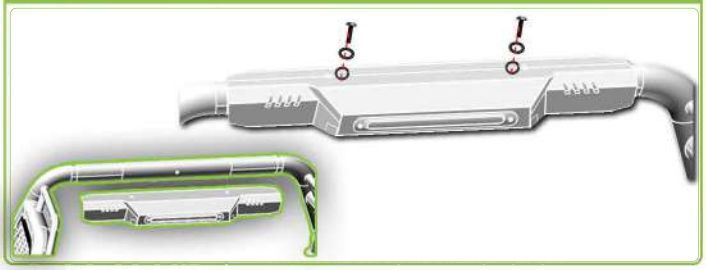

STEP 06

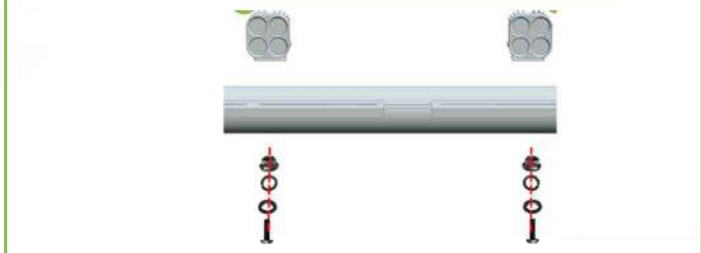

TWO INSTALLATION VARIATIONS

(Choose the installation style matching yourvehicle model)



① Models With Track:
Hardware K is not requied



② Models Without Track:
Hardware K is required

